



**OWNER'S MANUAL**

**KORTHO  
HOT QUICK CODER**

**INSTALLATION - OPERATION - MAINTENANCE**



MODEL SHOWN: HQC-100



MODEL SHOWN: HQC-100

WITH HOT QUICK CODER BENCH MOUNT STAND - 12" X 18"

**UNIVERSAL STENCILING & MARKING SYSTEMS, INC.**

P.O. BOX 871 - ST. PETERSBURG, FLORIDA 33731 USA

PH: (727) 894-3027 FAX: (727) 821-7944

E-Mail: [sales@universal-marking.com](mailto:sales@universal-marking.com) Website: [www.universal-marking.com](http://www.universal-marking.com)

**HQC-08101**

# TABLE OF CONTENTS

Preface	3
Specifications	
HQC-100	4
1. General Instructions Before Use	
Liability	5
Life Span	5
Normal Use	5
Environment	5
Operational Personnel	5
2. General Introduction	
The Hot Quick Coder	6
The Control Box	6
The Control Panel	7
Connections on the Control Box	8
The Support Arm	8
3. Safe Use	
Safety Measures	9
General Safety Measures	9
Explanation of attached Stickers	10
4. Installation Of The Hot Quick Coder	
Assembly instructions	11
Connection instructions	11
5. Putting The Hot Quick Coder Into Operation	
Setting up the Control Box	12
Applying the Text material	13
Adjusting the Position of the Hot Quick Coder	13
6. Starting Up The Hot Quick coder	
Preparation for use	14
Adjustment of the Hot Quick Coder	15
7. The Hot Quick Coder During Use	
Changing a Text Head	16
Replacing the Ink Roll	16
8. Deactivating The Hot Quick Coder	
Stopping printing for a short time	17
Stopping printing for a longer time	17
9. Maintenance And Cleaning	
Maintenance	18
Cleaning	18
Appendix A - List of possible Malfunctions	
Making a Diagnosis of Malfunctions	19
Locating faults in the Hot Quick Coder Electronics System	20
Checkpoint 1 - 4	20
Checkpoint 5 - 7	21
Checkpoint 8	22
Checkpoint Checklist: Steps to be carried out.	22
Print Quality Problems	23
Appendix B - Technical Data	
Technical Data Hot Quick Coder	25
Technical Data Control Box for the Hot Quick Coder	25
Temperature setting up with the Control Box	26
Appendix C - Connection Diagrams	
Control Box Electrical Connection Diagram	27
Signal Device: Checking Wiring Connection	28
Setting the Hot Quick Coder to the correct mains voltage (110/220V)	28
Parts Lists, & Diagrams	29

## ***PREFACE***

---

The Kortho Hot Quick Coder can be used on almost any material and surface. Whether you make 10,000 or 100,000 prints a day, the Kortho Hot Quick Coder offers the perfect solution for a variety of coding applications. The unit accommodates up to three lines of text in a maximum printing area of 12 x 24 mm. The unique spring-loaded jumping head, with its “butterfly touch”, allows you to make perfect prints on moving products.


The Kortho Hot Quick Coder utilizes hot ink technology to provide clean, sharp, nearly instant dry impressions at a high rate of speed. Ink rolls, which are dry to the touch at room temperature, are preheated prior to use in the self-contained heating system. When hot, the ink in the roll becomes fluid and is then ready for operation. During production, a spare roll can be stored in the unit’s preheat chamber to keep it ready for immediate use. Ink rolls are available in black, white, red, yellow, green & blue and are supplied in convenient six-pack boxes.

## ***CODER SPECIFICATIONS***

The specification section includes a drawing of the Hot Quick Coder with the basic dimensions, the net weight, print area, max printing & product speed, electrical specifications & working pressure.

# SPECIFICATIONS

## KORTHO HQC-100 HOT QUICK CODER

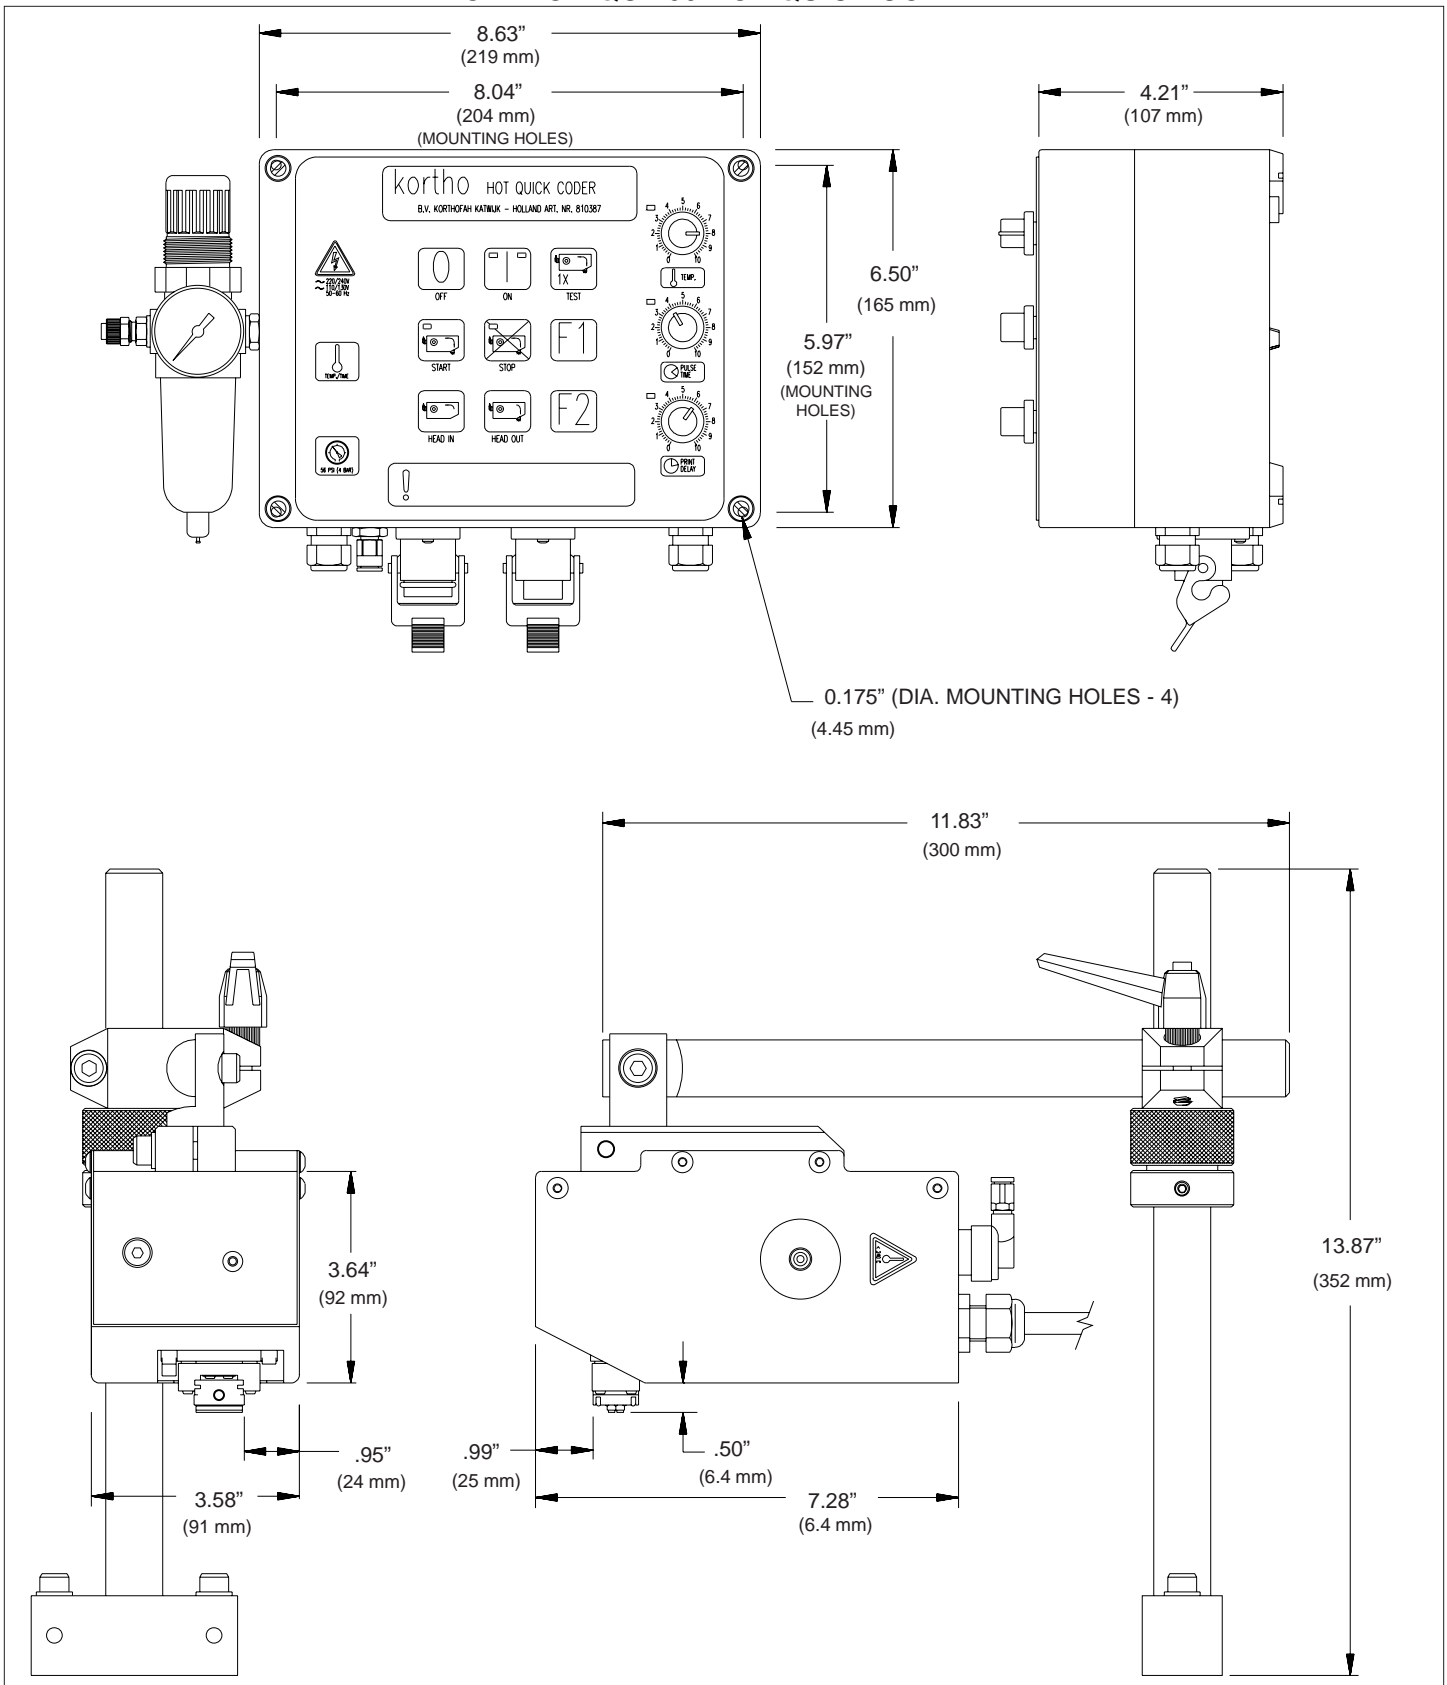

Print Area: 0.472" X 0.945" - (12 x 24 mm)  
 Printing Speed Max: 300 Prints/min.  
 Product Speed Max: 196 Ft./min. - (60m/min.)  
 Working Pressure: 56 PSI - (4 bar)

Electrical: 110-130 VAC/1 A.  
 Electrical: 220-240 VAC/0.5 A.  
 Coder Weight: 3.75 Lbs. - (1.7 Kg.)  
 Control Weight: 4.41 Lbs. - (2 Kg.)

# 1 - GENERAL INSTRUCTIONS BEFORE USE

---

*The KORTHO, Hot Quick Coder was manufactured to exacting standards and every available step has been taken to assure your complete satisfaction. It is most important, however, that the instructions contained in this manual are read and carefully followed for best results. Failure to do so may result in unsatisfactory performance, damage to the equipment and personal injury. Read through this user's manual carefully before putting the Hot Quick Coder into use for the first time. Follow the order indicated precisely when carrying out any of the actions described in this manual.*

***Pay particular attention to all stated warnings!***

## 1.1 Liability

**KORTHO** accepts no liability for damage resulting from the improper or uninformed use of the equipment or caused by maintenance or other work being carried out improperly. They also accept no liability for the normal wear-and-tear of the product.

## 1.2 Life Span

The life span of the equipment is ten years with normal use and compliance with the indicated maintenance periods. The life span can be negatively influenced if original parts are not used for repairs. All claims to a guarantee or compensation for damages do not apply in such an instance. The Hot Quick Coder does not contain any harmful substances or materials and can be scrapped or recycled at the end of its life span. The Ink Rolls should be treated as small chemical waste.

N.B. The above statement is based on the legislation in force as at mid 1995.

## 1.3 Normal use

Normal use means use under normal conditions i.e. stamping pressure, time and temperature set within the margins indicated in this User Manual.

## 1.4 Environment

The environment in which the Hot Quick Coder may be installed must comply with a number of requirements relating to humidity, temperature and vibrations.

The relative humidity should be between 0 and 85% (non-condensing).

The ambient temperature should be between 41 and 104°F.

The Hot Quick Coder may not be used in any areas having a fire or explosion hazard.

The Hot Quick Coder should be installed in a low vibration location.

## 1.5 Operational Personnel

Operating personnel are required to be informed by means of instruction as to the functioning of the equipment. They also need to be informed about the tips and warnings stated in this manual. A specific preliminary training is not required.

Personnel carrying out repairs and technical maintenance on the equipment should have a secondary technical education or a comparable technical level of knowledge through practical experience.

## 2 - GENERAL INTRODUCTION

The Hot Quick Coder (henceforth **HQC**) has been developed to apply small texts of one to three lines (max. line length 25 mm) on a production line. The applications vary from loose products to a continuous product (e.g. packaging film).


The text can be applied to a stationary or a moving product. The maximum permitted product speed is 195 Feet/min. approx. 250 impressions per minute can be produced.

### ! WARNING:

After using the HQC, it cannot simply be deactivated. For the correct procedure read section 8 "Deactivating the Hot Quick Coder"

## 2.1 The Hot Quick Coder

**Figure 1: The Hot Quick Coder**

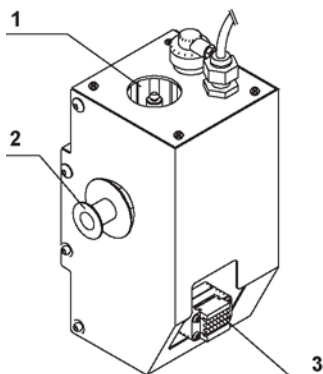


- 1 Preheating
- 2 Ink Roll
- 3 Text head

The code to be printed is applied to an exchangeable text head via text characters or blocks. The text head is inked with a Ink Roll which only delivers the inked (wax-based) at high temperature. The Ink Roll is kept at temperature in the heating ring of the HQC.

## 2.2 The Control box

A good print quality is achieved with a correct combination of stamping time, stamping pressure, temperature of the text head and the setting of any counter-pressure plate.

**Figure 2: The Control box**

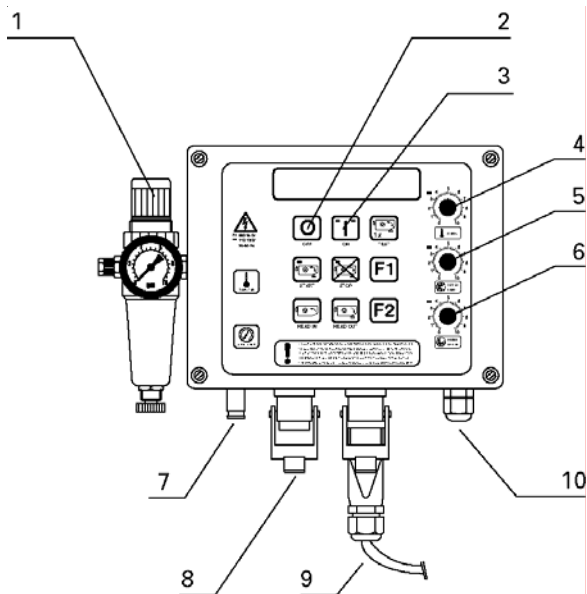

- 1 Pressure setting
- 2 OFF button
- 3 ON button
- 4 Temperature setting
- 5 Pulse/time setting
- 6 Print/delay setting
- 7 HQC air connection
- 8 Main power connection
- 9 Hot Quick Coder connection
- 10 Coupling nut

The stamping time and temperature are set with the buttons on the Control box. The stamping pressure is set as standard to 56 psi. The impression can be optimised using a counter-pressure plate, if there is one. (In case film belts)

### !!! NOTE !!!


The HQC air connection is a rapid connection as indicated in figure 2. Other figures of the Control box in this manual still show the old connection.

The Control box contains a Control Panel with which specific functions can be performed such as switching the HQC on and off and setting the print parameters. The Control Panel can also be used to issue a test print signal.

## 2.2.1 The Control Panel

The Control Panel of the Control box contains the following buttons (see figure 3).

**Figure 3: The Control Panel**

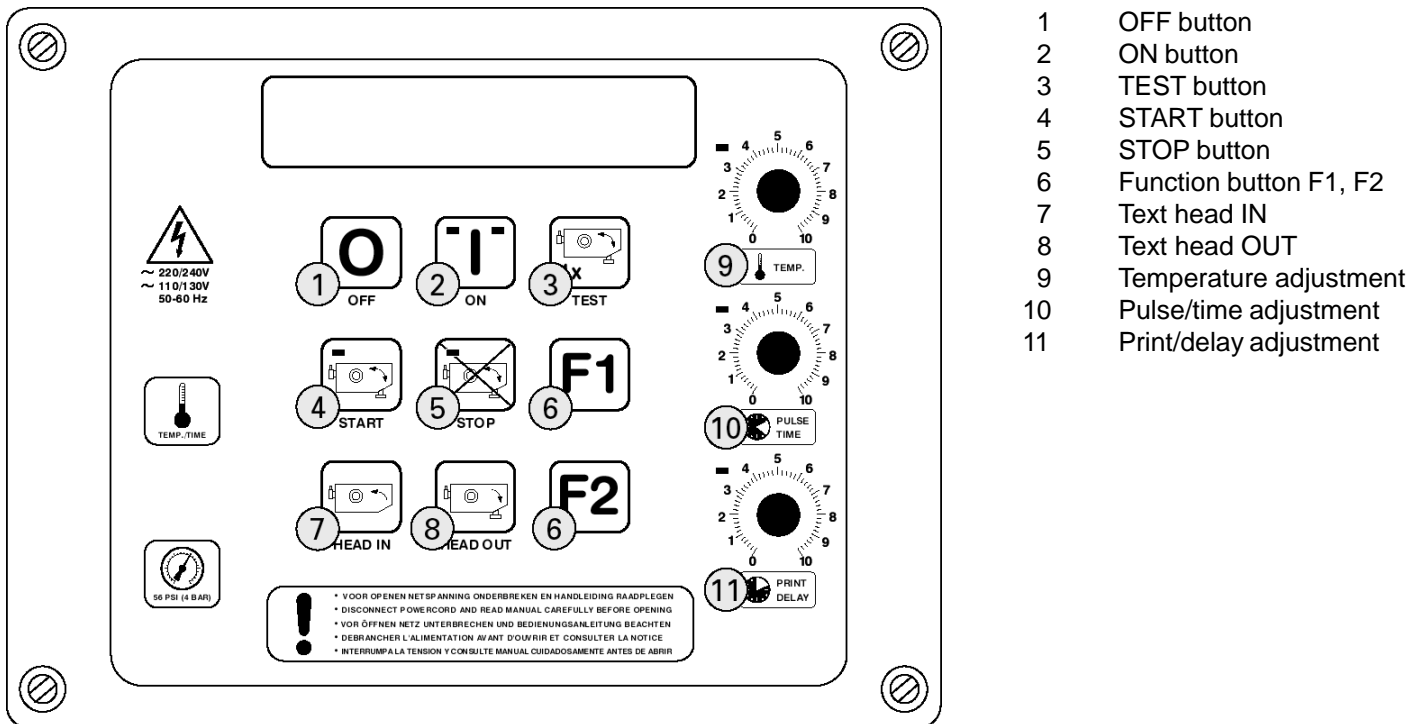

- OFF (1) This button is used to switch off the system. The main power remains connected to the system.
- ON (2) If it is connected to the main power, this button is used to switch the system on. The two green lights indicate that the two low voltages for the electronics and the magnetic valve are present.
- TEST (3) The HQC performs a test print. The system should first be enabled by activating the START button.
- START (4) Once this button is pressed, the HQC is enabled for coding. The green light on the START button is illuminated when a print signal is received from the signal emitter. This may be a switch, photocell, relay contact, inductive sensor or 24V DC voltage pulse. The orange light on the STOP button goes out once the START button has been pressed.
- STOP (5) Once this button is pressed, the HQC stops coding. The orange light on this button will illuminate to indicate that the system is in preheating mode. The control will keep the text head at temperature.
- F1..F2 (6) As standard these buttons do not have a function. A specific function may be assigned to them if customer geared options are incorporated.
- HEAD IN (7) If the text head holder is in the outermost position, pressing this button moves the text head into the HQC.

HEAD OUT	(8)	This button moves the text head holder to the outermost position. This button should be pressed to change a text head or text. It can then be used to fix the HQC to the material to be coded. The text head (holder) is moved back into the HQC by pressing (7) HEAD IN.
TEMP	(9)	For adjusting the temperature of the text head between 176°F and 320°F. When the red light is illuminated continuously once the system has been started up, the text head is heating up. When the text head has reached the desired temperature, the red light will flash to indicate that the text head is being kept at temperature. The text head is now kept at the set temperature.
PULSE/TIME	(10)	For adjusting the desired stamping time of the text head. This time can be set between 10 and 50 milliseconds. The orange PULSE/TIME light emits a light signal during the stamping time.
PRINT DELAY	(11)	The green light on this dial is illuminated when a print signal is emitted by the signal emitter.


The print delay can be deactivated by connecting jumper J16 on the PCB in the lid of the Control box. See Appendix C.

## 2.2.1 Connections on the Control box

The Control box (see figure 2) has an HQC air connection (7), main power connection (8), HQC connection (9) and a swivel acting as a feed for a signal emitter (10).

## 2.3 The support arm

**Figure 4: The support arm**

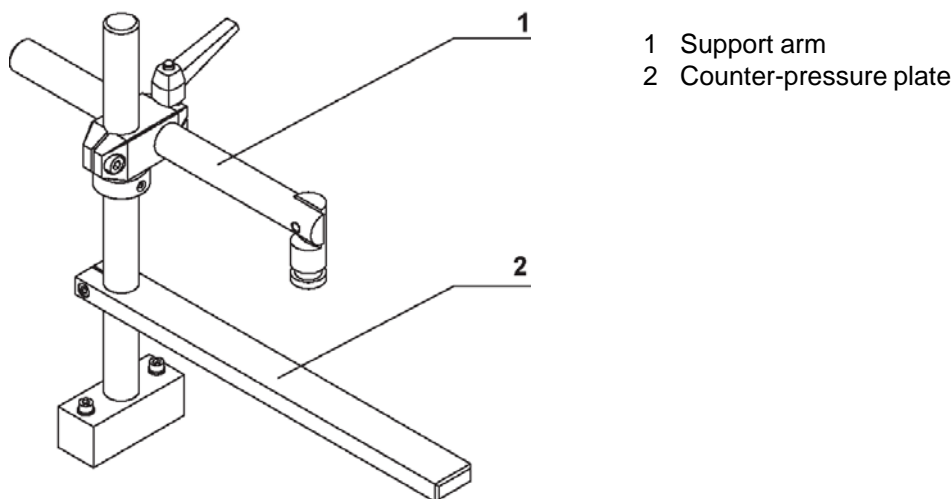

The support arm is used to position the HQC and any counter-pressure plate in relation to the product to be printed.

The support arm is suitable for moving the HQC to any position.

The exceptionally short stamping time makes it possible to print directly onto a moving product without further modifications.


The HQC is a durable and reliable piece of coding equipment. In order to work with it safely, it is important that the precautions indicated in this manual are strictly followed.

### SAFETY MEASURES

- ! Before opening the Hot Quick Coder, disconnect it from the main power by removing the power cord from the control box (see Figure 5).
- ! After using the HQC, it cannot simply be deactivated. For the correct procedure read section 8 "Deactivating the HQC".
- ! Take care not to touch the hot text head of Ink Roll (for example when inserting or replacing a Ink Roll). Allow the printer to cool down for approximately fifteen minutes before carrying out work on the HQC.
- ! **Never** insert your fingers between the text head and the counter-pressure plate or the product.

### 3.1 General Safety Measures

*Figure 5: Disconnecting the Hot Quick Coder from the main*

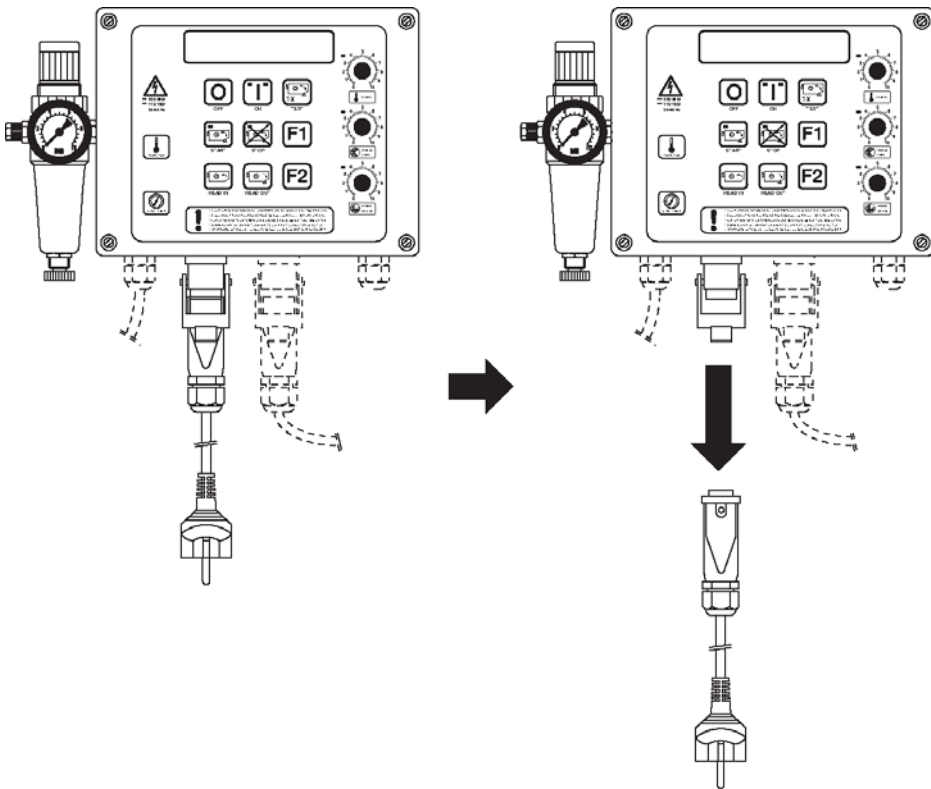

The operation of the HQC is based on:

- movement (of the text head);
- pressure (built up between the text head and the counter-pressure plate or the product);
- heating (of the text head and the Ink Roll).

There are potential dangers hidden in the above with regard to the Hot Quick Coder. Safety measures are given in this manual for situations which are potentially dangerous. The following is an overview of the most important safety measures.


## 3.2 Explanation of attached stickers

Figure 6: Symbols


Various warning symbols are attached to the Hot Quick Coder.  
Here is an explanation of the symbols on the stickers.




General danger

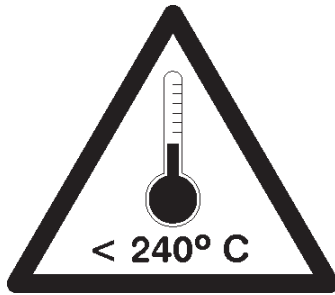

Danger due to high temperature

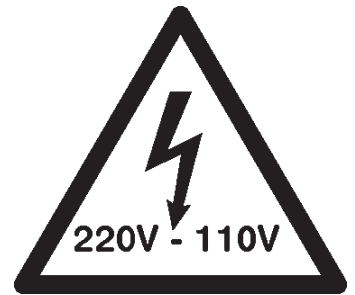


Danger due to high voltage parts

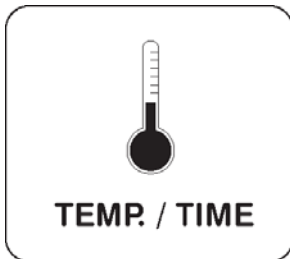

Coding unit remains hot for awhile after use



Maximum adjustable pressure

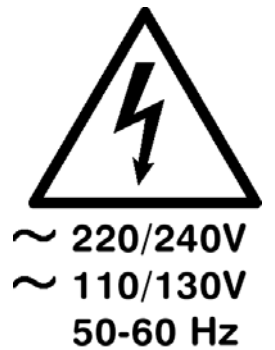

Voltage requirements

## 4 - INSTALLATION OF THE HOT QUICK CODER

### 4.1 Assembly instructions

Figure 7a: Options for coding products


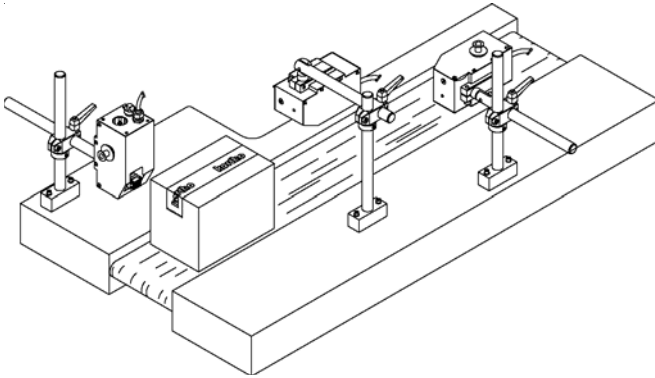


Figure 7b: Options for coding lengths of film

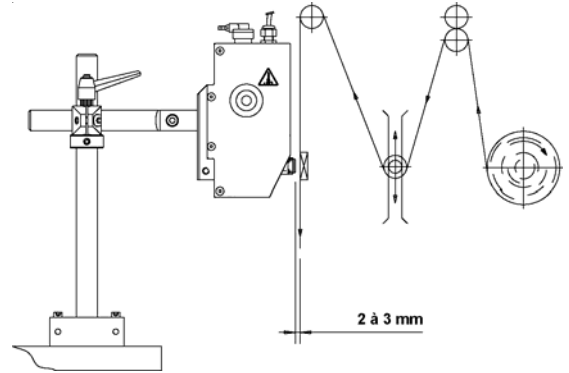

See Figure 7 for a summary of the options. During assembly ensure that sufficient space is left around the coder to replace the Ink Roll and to change the text head. If necessary, set up the coder so that it revolves. The dimensional sketches are included in Appendix D.

1. Mark the desired position of the holes for assembling the support (2.75" C-C). When determining the position, take account of the fact that the text head (in the marked position) should ultimately be located approx. 5/64" - 1/8" from the product surface to be printed (figure 7b).
2. Drill the mounting holes for the support (diameter 17/64").
3. Assemble the support with 1/4" bolts (x2).
4. Fix the coder to the support.
5. Mark the desired position of the holes for assembling the Control box.
6. Drill the mounting holes for the Control box (3/16" diameter).
7. Assemble the Control box with #8 Screws and nuts (x4).

### 4.2 Connection instructions

#### ! WARNINGS:

Before opening the control of the Hot Quick Coder, it should first be disconnected from the power. This is done by removing the main power cable from the Control box (see figure 5).

Only a GROUNDED cable may be used for connecting the equipment

1. Disconnect the printer from the voltage by removing the main power cable from the Control Box.
2. Open the Control box.
3. Check that the desired power supply is set correctly. (see appendix C).
4. Connect a sensor to supply the print command. The connection points and settings of the switch and jumpers are given in appendix C.
5. Connect the power and control cable to the coding part.
6. Connect the Control box to the compressed air supply (setting approx. 58 psi) via the reducing valve.
7. Connect the HQC to a **grounded** connection.

## 5 - PUTTING THE HOT QUICK CODER INTO OPERATION


The correct operation of the HQC is determined by the setting of the stamping time, stamping pressure and temperature and the distance of the HQC from the surface to be printed.

The description below assumes that:

- The HQC has been installed so that it is easily accessible (see section 4).
- The supply of products is interrupted.
- The HQC is switched on.

### 5.1 Setting up the Control box

Figure 8: Setting up the Control Box

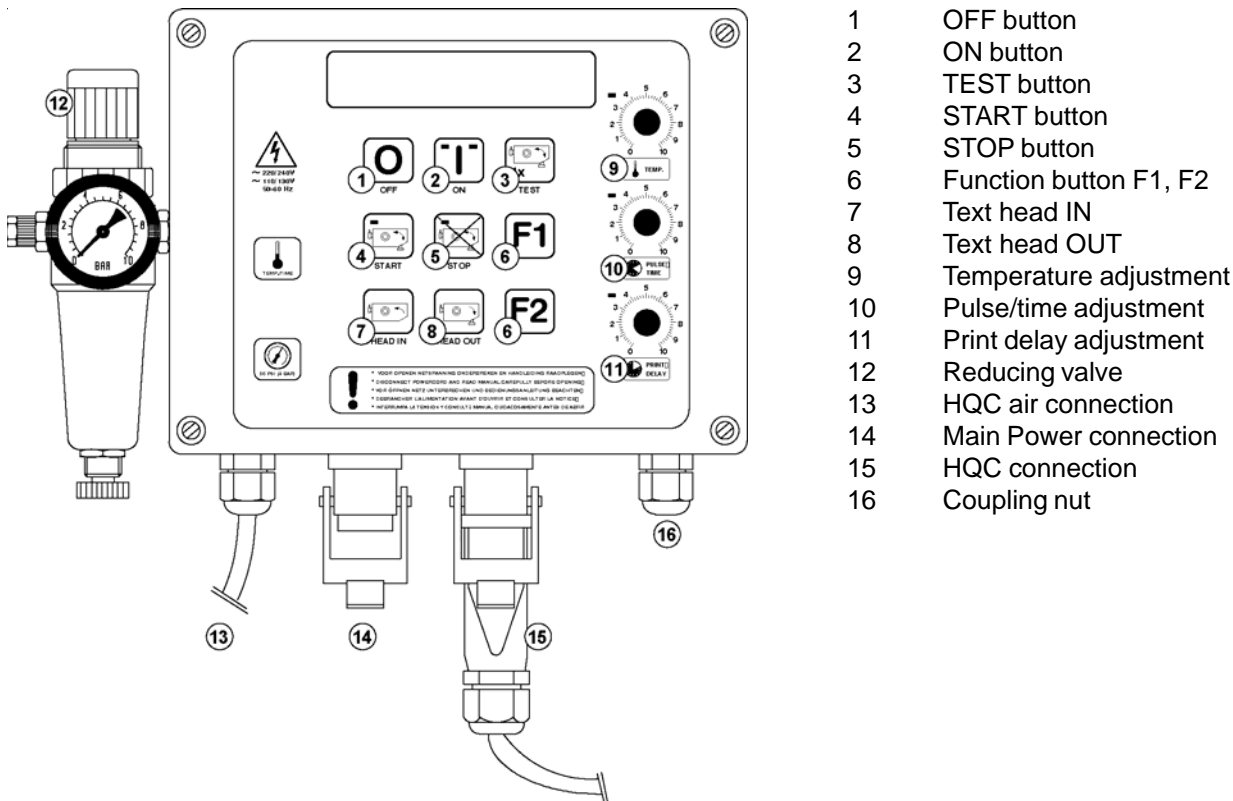

The HQC can be switched On and Off with the ON (2) and OFF (1) buttons. The dials (9), (10) and (11) are used respectively to adjust the temperature of the text head, the stamping duration and the printing position on the product.


Switch on the system by pressing the ON button (2). The operating temperature of the HQC is around 135° C in most instances. This means that a heating up time of 15 minutes (position 8) after switching on the HQC should be taken into account. The system automatically switches to the warming-up position after the ON button has been pressed. The red light next to the TEMP turn knob (9) will be lit continuously. No prints are made during the warming-up phase if a print signal is received. The HQC remains in the STOP position during the warming-up phase and the orange light on the STOP button (5) is lit.

The warming-up phase is completed when the red light on the TEMP turn knob (9) blinks at a steady rate. After the warming-up phase, a testprint can be made by pressing the TEST button (3). To make a testprint, however, the system needs to first be released by pressing the START button (4). Depending on the quality of the testprint, the HQC may need to be adjusted. Otherwise, simply press the START button (4) to prepare the HQC for production.

An explanatory overview of the buttons and turn knobs on the control box control panel is given in Chapter 2.

## 5.2 Applying the text material

Figure 9: The text head

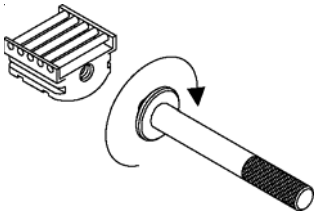


The text head has a printing area of 17 x 20 mm or 17 x 25 mm. The printing area has a specially shaped profile. The text characters have the same profile on the reverse. The text characters are applied to the text head with a simple printing movement.

The 'blank space' in the text characters on the same "line" should be completely filled with space characters.

## 5.3 Adjusting the position of the Hot Quick Coder

Figure 10: Distance to the product

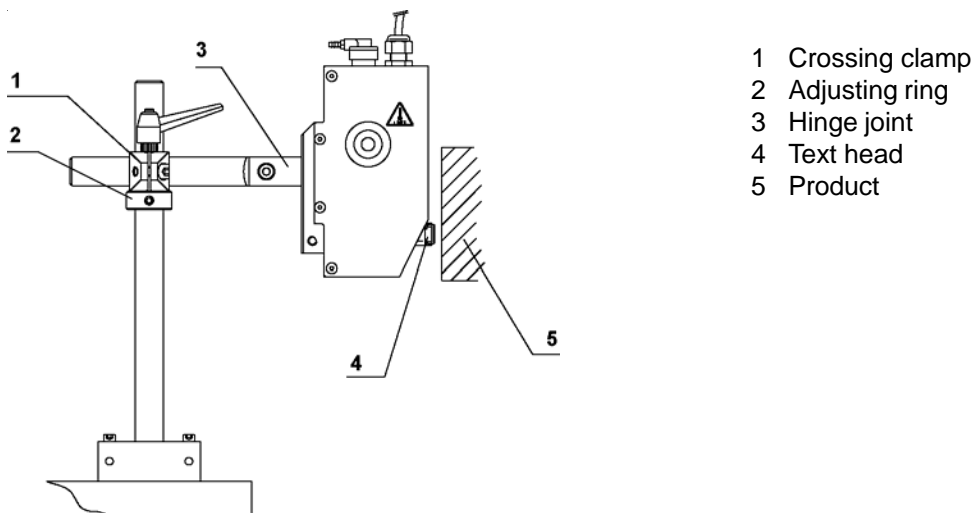

The HQC should be positioned such that the text head (5) is located in the position shown 2 to 3 mm from the surface to be coded.

Activate the "HEAD-OUT" button (8) on the Control Panel (see section 5.1). This will fix the text head holder in the outermost position.

Position the text head in the holder (see section 6.1).

Position the Hot Quick Coder so that the text head is located 2 to 3 mm from the surface to be coded.

Lock the crossing clamp (1).

Place the adjusting ring (2) against the underside of the crossing clamp.

Adjust the hinge joint (3) so that the product will be coded **evenly**. If necessary, reset the height.

Activate the "HEAD-IN" button (7) on the Control Panel (see section 5.1). The text head moves in.

A fine adjustment is available as an option. This can be used to adjust the distance to the product simply and accurately.

## 6 - STARTING UP THE HOT QUICK CODER


### ! WARNINGS:

Failure to observe the requisite heating up time of  $\pm 15$  mins. leads to irrevocable damage to the text material and the Ink Roll!

Failure to remove the handle from the text head can damage the HQC.

### 6.1 Preparation for use


Figure 11: Preparation for use

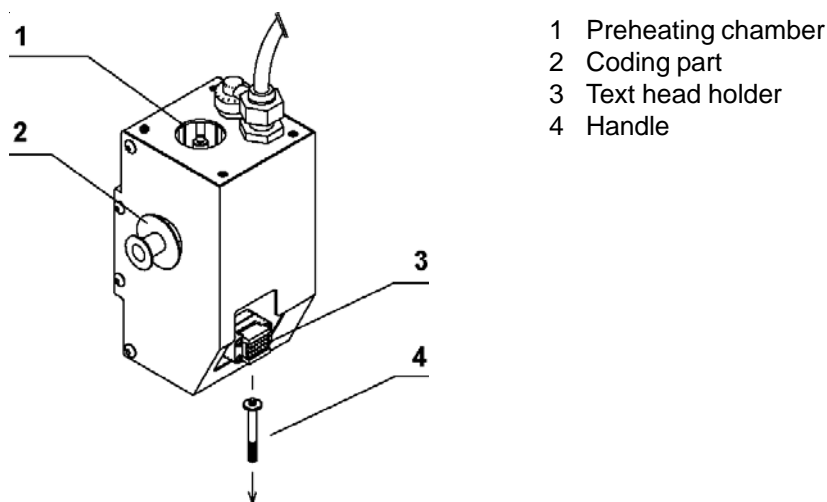

1. Take the text head and prepare it for use by applying the desired text material (see section 5.2).
2. Connect the system to the Control box by pressing the ON button.
3. Activate the HEAD-OUT button on the Control Panel (see section 5.1). This fixes the text head in the outermost position.
4. Place the text head in the text head holder.
5. Remove the handle (4) by twisting it out of the text head.
6. Place a Ink Roll in the coding part (2) of the HQC; the cartridge must be pushed in until it clicks.
7. Activate the HEAD-OUT button on the Control box (see section 5.1).
8. Set the temperature adjustment on the Control box (section 5) to position 8 which sets the temperature to approx. 275°F.
9. Take account of 15 to 20 minutes' heating up time.
10. Activate the START button on the Control box (see section 5.1).
11. Activate the supply of products.  
Adjust the print quality further in accordance with the instructions in section 6.2.
13. Place a Ink Roll in the preheating chamber (1). This heats up a new Ink Roll during production so as to avoid undesirable loss of production.

## 6.2 Adjustment of the Hot Quick Coder

Figure 12: Adjustment of the HQC

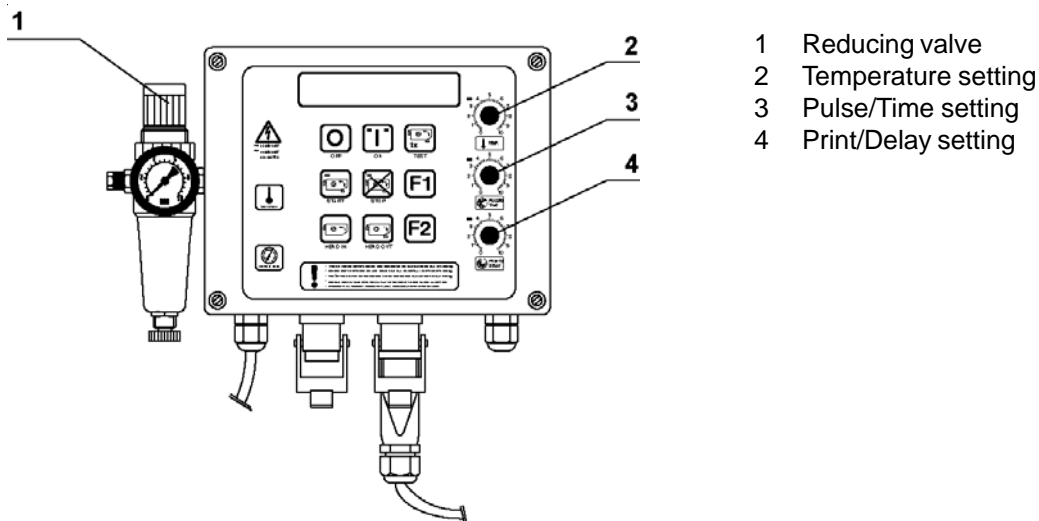

A correct adjustment of the HQC is achieved by the setting of the stamping pressure, temperature and stamping time. The stamping pressure is adjusted with the reducing valve. This is mounted on the left-hand side of the Control box (1). The temperature is set with the TEMP dial (2). The stamping time is set with the PULSE/TIME dial (3). Furthermore, the PRINT/DELAY dial (4) can be used to set a delay between the sensor signal and the actual coding job through the Control box to the HQC.

### STEPS:

1. Set the stamping pressure to approximately 56 psi.
2. Set the temperature to position 8 (approx. 275°F).
3. Set the stamping time such that an optimum print is generated. If necessary, the print quality can be improved by slightly increasing the pressure and/or temperature.

If the print does not result in a completely even image, the position of the HQC probably needs to be adjusted (see section 5.3).

### **! WARNINGS:**

Too high a temperature setting can reduce the service life of the Ink Roll.  
Too high an air pressure setting can reduce the service life of the Hot Quick Coder.

The standard optimum setting in most cases is an air pressure of 56 psi and a temperature of approx. 275°F (position 8). Adjust the setting so that both the temperature and the air pressure are around the standard setting.

### 7.1 Changing a text head

Texts can be changed particularly quickly by changing the text head.

**! WARNINGS:**

If the text head is removed during normal operation, it's temperature is approximately 120°C!

Failure to remove the handle from the text head can damage the HQC.

1. Stop the supply of products.
2. Remove the product under (or in front of) the HQC or turn the HQC in its entirety away from the belt.
3. Activate the HEAD-OUT button on the Control Panel.
4. Twist the handle into the text head.
5. Use the handle to extract the text head from the text head holder.
6. Use the handle to position the (new) text head in the text head holder (check for blockages).
7. Twist the handle out of the text head.
8. Activate the HEAD-IN button on the Control Panel. This moves the text head back into neutral position.
9. Allow the new text head to reach operating temperature (approx. 2 minutes).
10. Replace the product under (or in front of) the HQC or turn the HQC in its entirety back towards the belt.
11. Start the supply of products.

### 7.2 Replacing the Ink Roll

If the print becomes less legible, the Ink Roll should be replaced. Replace the used roll with a roll which has already been brought up to the correct temperature in the preheating chamber of the HQC.

**! WARNINGS:**

Failure to follow the rules below when replacing an Ink Roll leads to damage to the text material, the Ink Roll and the HQC itself!

The temperature of the text head is approximately 248°F!

1. Activate the STOP button on the Control Panel.
2. Stop the supply of products;
3. Activate the HEAD-OUT button on the Control Panel;
4. Extract the used Ink Roll from the coding part of the HQC;
5. Remove the new Ink Roll from the preheating chamber;
6. Slide the new Ink Roll into the coding part of the HQC; the cartridge must be pushed in until it clicks;
7. Replace the removed product under (or in front of) the HQC;
8. Activate the HEAD-IN button on the Control Panel;
9. Activate the START button on the Control Panel.
10. Restart the supply of products;
11. Place a new Ink Roll in the preheating chamber.

### 8.1 Stopping printing for a short time

If the HQC is deactivated for a short time (during a break), the STOP button on the Control Panel should be pressed. The thermostat part of the Control box continues to operate normally. When production is resumed, the START button on the Control Panel must be pressed and the HQC is ready for immediate use.

### 8.2 Stopping printing for a longer time

If the HQC is deactivated for a longer time (several days):

1. Stop the supply of products;
2. Activate the HEAD-OUT button on the Control Panel;
3. Remove the Ink Roll from the coding part of the HQC;
4. Activate the HEAD-IN button on the Control Panel. This moves the text head back into neutral position;
5. Now switch off the HQC using the OFF button on the Control Panel;
6. If necessary, remove the air pressure from the system;
7. If desired, resume the supply of products;

When the system is **started up again**, you should take account of the requisite heating up time of 15 to 20 minutes (see section 5.1).

**! WARNING:**

Failure to observe the requisite heating up time of  $\pm 15$  minutes leads to irrevocable damage to the text material and the Ink Roll!

### **! WARNINGS:**

Whenever the HQC is cleaned it should first be completely disconnected from the main power by removing the main plug from the Control box (see figure 5)

Under no circumstances must the HQC be cleaned with water.

### **9.1 Maintenance**

It is recommended to have the HQC system checked and/or reconditioned periodically. The recommended frequency is once every two years depending on the degree of use of the HQC. No special tools are needed for carrying out maintenance work.

### **9.2 Cleaning**

The HQC can best be cleaned using a dry brush. The control box can best be cleaned using a cleaner that will not damage the plastic.

# APPENDIX A: LIST OF POSSIBLE MALFUNCTIONS

## ! WARNING:

If you decide to open the Control box of the Hot Quick Coder, the entire installation should first be disconnected from the power! This is done by removing the main power cable from the Control box (see figure 5).

## Making a Diagnosis of Malfunctions

A diagnosis can be made at the electrical level using the lights on the Control Panel of the Control box.

The lights on the control box control panel indicate the following:



ON

**ON, green, left:**

**Light illuminated:** 12V DC power supply present for electronics.

**ON, green, right:**

**Light illuminated:** 24V DC power supply present for magnetic valve coil and print signal sensor.

**START, green:**

**Light illuminated:** the sensor is activated.




STOP

**STOP, orange:**

**Light illuminated:** the HQC is in preheating mode.

The lights to the upper left of the turn knobs indicate the following:

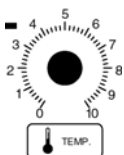

TEMP.

**TEMP, red:**

**Light is lit:** the heating element is receiving voltage.

**Light burns continuously:** the heating element is preheating the printhead.


**Light is blinking at a steady rate:** the set temperature of the sensor has been reached.



PULSE  
TIME

**PULSE/TIME, yellow:**

**Light is lit:** the solenoid valve is being powered.

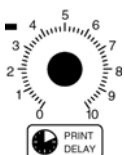

PRINT  
DELAY

**PRINT/DELAY, green:**

**Light is lit:** during the delay time. The light is also lit up whenever the PRINT/DELAY is not switched on.

# Locating faults in the Hot Quick Coder Electronics System

\* REFER TO “CHECKPOINT CHECKLIST” on page 22

## Checkpoint 1 PRESENCE OF MAIN VOLTAGE

Is the main power present, check voltage supply?

No: \*Perform steps 13 and 14

Check that the main power is now present.

No: Fault outside the HQC system

Yes: Go to checkpoint 2

## Checkpoint 2 TESTING ON and STOP

Activate the ON button

Are the ON and STOP lights illuminated?

Yes: Go to checkpoint 3

No: \*Perform steps 1 and 15

\*Perform steps 2, 6, 7 and 8

\*Perform steps 11 and 12

Activate the ON button

Are the ON and STOP lights now illuminated?

No: Contact the KORTHO service department.

Yes: Go to checkpoint 3

## Checkpoint 3 TESTING THE TEMPERATURE

Check that the ON button lights are still on.

Is the light next to the Temp dial illuminated?

Yes: Go to checkpoint 4

No: \*Perform steps 1, 22, and 15

\*Perform steps 3, 8, 9, 17 and 18

\*Perform steps 11 and 12

Activate the ON button

Is the light next to the Temp dial now illuminated?

No: Contact the KORTHO service department

Yes: Go to checkpoint 4

## Checkpoint 4 TESTING START and STOP

Set the temperature and wait at least five minutes after the TEMP light starts flashing.

Check that the ON button lights are still on.

Activate the START button

Does the STOP light go out?

Yes: Go to checkpoint 5

No: \*Perform steps 1 and 15

\*Perform step 9

\*Perform steps 11 and 12

Activate the ON button

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the START button. Does the STOP light now go out?

No: Contact the KORTHO service department

Yes: Go to checkpoint 5

## Checkpoint 5 TESTING PULSE/TIME

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on and activate the START button.

Activate the TEST button

Is the PULSE/TIME light illuminated?

Yes: Go to checkpoint 6

No: \*Perform steps 1 and 15

\*Perform step 9

\*Perform steps 11 and 12

Activate the ON button and the START button.

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the TEST button. Is PULSE/TIME now illuminated?

No: Contact the KORTHO service department

Yes: Go to checkpoint 6

## Checkpoint 6 TESTING OPERATION OF TEXT HEAD HOLDER

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the TEST button

Does the text head holder of the HQC move?

Yes: Go to checkpoint 7

No: \*Perform steps 1 and 15.

\*Perform steps 8, 9 and 23.

\*Perform steps 10 and 18.

\*Perform steps 11 and 12.

Activate the ON button and the START button.

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the TEST button. Does the text head holder of the HQC now move?

No: Contact the KORTHO service department

Yes: Go to checkpoint 7

## Checkpoint 7 TESTING THE SYSTEM ADJUSTMENT

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the TEST button

Adjust the system in accordance with Section 5

Does the text head holder of the HQC move?

Yes: Go to checkpoint 8

No: \*Perform steps 1 and 15.

\*Perform steps 19 and 20.

\*Perform step 21.

\*Perform steps 11 and 12.

Activate the ON button and the START button.

Set the temperature and wait until the TEMP light starts flashing (**see note pg. 20**).

Check that the ON button lights are still on.

Activate the TEST button. Does the text head holder of the HQC now move?

No: Contact the KORTHO service department

Yes: Go to checkpoint 8

## Checkpoint 8 FINAL CHECK

The Hot Quick Coder should now be working properly.

If the HQC is still not working properly, the KORTHO service department should be called.

**Note:** If some time has passed after Checkpoint 4, the control light should flash for at least five minutes. During this period, the entire text head on the Hot Quick Coder reaches the desired temperature which is essential for further tests.

### “Checkpoint Checklist” ✓ : Steps to be carried out

1. Press the OFF button and disconnect the system from the mains by removing the mains cord from the control box.
2. Check whether the wires from the mains connection are fastened properly in the plug and in the power supply connector.
3. Check whether wire numbers 1 & 2, the sensor, are fastened properly in the plug and in the power supply connector.
4. Check whether wire numbers 3 & 4, the heating element, are fastened properly in the plug and in the power supply connector.
5. Check whether fuses F1 & F2 for supplying power to the heating element are still intact.
6. Check whether fuses F3 & F4 for supplying power to the electronic elements are still intact.
7. Check whether fuses F5 & F6 for the secondary alternating voltage for the electronics are still intact.
8. Check for damage to the flat cable which runs from the power supply board to the control board.
9. Check whether the flat cable which runs from the control panel to the control board is damaged or has come loose
10. Check the air pressure. This should be adjusted at around 4 bar.
11. Close the control box and/or coding unit carefully.
12. Connect to the mains voltage by reconnecting the mains cord.
13. Check whether the voltage selection switch, SW2, is switched to the correct voltage: 115 or 230 VAC.
14. Switch it to the correct voltage, 115 or 230 VAC, 50-60 Hz, sinusoidal according to electricity company requirements.
15. Open the control box using a screwdriver. Handle the cover with care because of the cabling.
16. Test the heating element for continuity. To do so, see Appendix C.
17. Test the sensor for continuity. To do so, see Appendix C.
18. Check the wiring to and in the coding unit. Are they damaged or have they come loose?
19. Check whether the signaldevice entry is properly set using SW1. See Appendix C for instructions on how to adjust this. The entry needs to be set for the type of sensor; NPN, PNP or 24VDC voltage pulse.
20. Check whether the wiring of your signal device is properly connected (24VDC, signal, ground, galv). See Appendix C.
21. Check the wiring of the signal device for damage, such as interruption or short-circuit.
22. Check whether the encoder cable is properly connected to the control box.
23. Check whether wire numbers 5 & 6, the magnetic valve, are fastened properly in the plug and in the power supply connector.

# Print Quality Problems

## A. Text head does not move

	<b>POSSIBLE CAUSE</b>	<b>ACTION</b>
1.	Still in preheating mode. (STOP status).	Activate the START button on the Control Panel (normal operation, see also 5.1.1).
2.	No air pressure.	Check reducing valve on the Control box.
3.	No supply voltage.	Measure the voltage on the 220V AC terminals in the command box voltage.
4.	Fuse blown.	Check the fuses (on the PCB) in the Control box and replace if blown (coil and/or system power not illuminated).
5.	Magnetic valve defective.	Replace the magnetic valve.
6.	Wire broken in the supply and/or control cable.	Disconnect the system from the power and the cables. Test the power cable and control cable. (heating & sensor). If necessary, replace the power and control cable. (see electrical connection diagram appendix C).

## B. Text head moves but no printing or only partial printing visible

	<b>POSSIBLE CAUSE</b>	<b>ACTION</b>
1.	Temperature too low.	Set temperature to a higher value
2.	Stamping time too short.	Set stamping time to a higher value
3.	Counter-pressure plate / product far from the text head of the HQC.	Adjust the counter-pressure plate or HQC.
4.	Fault in the text material.	Check that the text material is not worn or that the (loose) characters are varying in height. If necessary replace the block or the characters
5.	The HQC is out of alignment with the product to be printed.	Adjust the HQC in relation to the product to be coded.
6.	The Ink Roll is empty (exhausted).	Check the Ink Roll and replace if necessary.
7.	The Ink Roll does not turn.	Check the position of the transport spring and adjust it if necessary.

## C. Printing too thick

	<b>POSSIBLE CAUSE</b>	<b>ACTION</b>
1.	Temperature too high.	Set temperature to a lower value.
2.	Stamping time too long.	Set stamping time to a lower value.
3.	Text head too close to product.	Adjust distance if necessary to 2-3 mm.

## D. The text head is not heating up

	<b>POSSIBLE CAUSE</b>	<b>ACTION</b>
1.	Fuse blown.	Replace the fuse (accessible from outside).
2.	Wire broken in the supply.	Check the control cable and the main power cable for short circuit or breakage. If necessary replace the power and control cable (see electrical connection diagram appendix C).
3.	Sensor is broken or defective.	Test the sensor at points 1 and 2 of the connector on the HQC (first disconnect the supply and control cable). The correct value is 220 kOhm at 77°F. Replace the cable if the value deviates more than 10%.
4.	Heating element defective.	Test the heating element at points 3 and 4 of the or short circuited connector on the HQC (first disconnect the supply and control cable). The correct value is 825 kOhm at 77°F. Replace the cable if the value deviates more than 10%.

### Technical data Hot Quick Coder

Mass of coding part [kg]	2
Mass of Control box [kg]	2.3
Length of supply and control cable [m].	2.5
Maximum printing area [mm x mm]	12 x 20 or 12 x 24
Maximum printing speed [prints/min]	300
Maximum product speed [m/min]	60
Operating pressure [bar]	±4
Temperature range text head [°C]	80 - 160
Supply voltage (50/60Hz) [V AC]	110 / 220 V AC ±10% 50-60 Hz
Air consumption	0.3 ltr. at 4 bar.
Power consumption [Watt]	110 max.

### Technical data Control box for KORTHO Hot Quick Coder

Mass [kg]	1.9
Dimensions L x W x H [mm x mm x mm]	310 x 125 x 300
Length of mains cable [m]	2.5
Supply voltage [V AC, reversible]	115 or 230 ±10% 50-60 Hz
Temperature range [°C]	80 – 160
Pulse/time setting [ms]	10 – 50
Print/Delay setting [s] *	0.10 – 2

Other specifications:

Zero voltage safety mechanism  
Industrial model, min. IP 65  
Option for Mini KORTHO Logic Controller

Inputs:

**Detection input:** J10, 24VCC, SIGNAL [+], GALV [-] and GROUND, with anti-branching circuit for: Sensors of type NPN [open collector], PNP [open collector].

These are connected to 24V CC, SIGNAL and GROUND. SW1 must be set depending on the type (NPN or PNP). For NPN, SW1-1=ON and SW1-2 = OFF. For PNP, SW1-1=OFF and SW1-2 = ON.

Potential free contact, This is a single-pin contact which is not yet used by other electronics. For example, a free contact from a relay in the packaging machine or a cam switch. Connect the two wires of the switch as you wish to SIGNAL and GROUND. Set SW1-1 to ON and SW1-2 to OFF (standard factory setting). Ensure the switch is of good quality!

A voltage pulse of 24V DC, minimum 15 ms instead of sensors or a switch, a 24V DC voltage pulse can also be used to issue a start command. This pulse must have a minimum duration of 15 ms. This pulse must be a clean rectangle without interference. In this state the input circuit is separated and filtered completely galvanically, too much interference causes problems!

Set SW1-1 and SW1-2 both to OFF. Connect the 24V DC (+) to the SIGNAL [+] and the ground to GALV [-]. For example, a PLC can supply this type of voltage pulse (this depends on the type of PLC).

**STOP :**

### **Input for interrupting coding:**

This input must be grounded with a potential-free contact or an NPN open collector. Connect the wires to J3, PRE EXT and GROUND. The maximum current which will run is 30 mA. The coding unit remains at temperature. When the contact is opened again, the HQC will be ready to resume coding after about 1 second. With this input the packaging machine, for example, can start/stop coding.

### **Outputs:**

**Signal busy with printing:** This signal is grounded as soon as the cylinder is activated. This output is an open collector which can switch 24V DC 30 mA. The connection you use is on J3, called PRINT. It is used to synchronise the HQC with the packaging machine, if the packaging supports this.

**Preheating signal:** As soon as the STOP button on the Control Panel is activated or the STOP input is triggered, this output is grounded. This output can switch 24V DC, 30 mA.

**Heating signal:** This output is grounded as soon as the heating element is activated. This signal goes down to the zero throughputs of the main voltage. This output can switch 24V DC, 30 mA. A pulse train can therefore be observed by using a pull-up resistor to, for example, the 24V CC. The pulse train is present when the red TEMP light is illuminated. This output can be used, for example, by an intelligent PLC with a high speed counting input. In this way the PLC can monitor the heating function of the hot printer.

## **Temperature setting up with the Control box**


[± 10°C]

### **Position**

1	80
2	85
3	90
4	100
5	110
6	115
7	125
8	135
9	150
10	160

Control Box Electrical Connection Diagram

PCB supply Hot Quick Coder: Electrical connection diagram HQC.

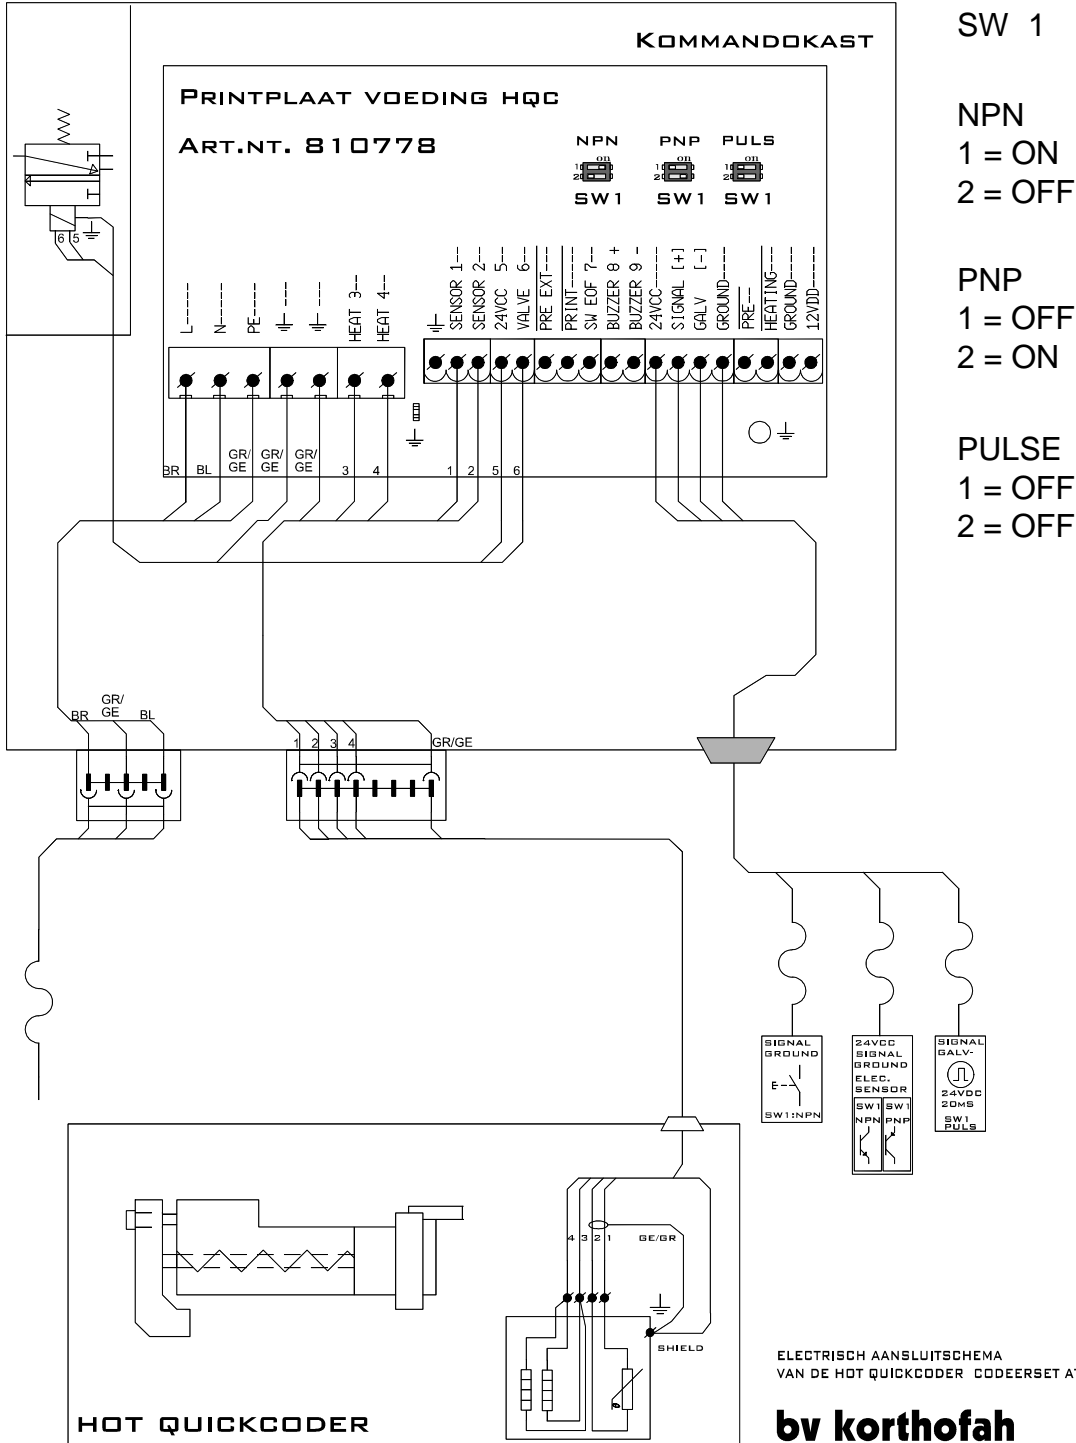

## Setting the Signal device entry using the SW 1

Here is a brief summary of the possible settings:

SW1-1 OFF,	SW1-2 OFF,	Pulse, 24V DC, min 15ms.
SW1-1 ON,	SW1-2 OFF,	NPN sensor or potential-free contact
SW1-1 OFF,	SW1-2 ON,	PNP sensor
SW1-1 ON,	SW1-2 ON,	Reserved setting

## Signal device: Checking Wiring Connection

Read the manual supplied with the sensor on how the wiring for this sensor should be connected to the Control box. Check that the sensor is suitable for a supply voltage of 24V DC, that it can switch 30 mA current etc. Sometimes a sensor has 4 wires and one of the wires must be connected to the 24V DC or GROUND (LIGHT-ON, DARK-ON).

## Setting the HQC to the correct main voltage (110/220V)

SW 2 is located on the PCB at the bottom of the box. This is used to select whether the Control box should operate on 115V AC or 230V AC. This therefore depends on the available main voltage. This is set as standard to 230V AC.

## **HOT QUICK CODER TRIGGERING DEVICES**

The print cycle of the HQC-100 Hot Quick Coder can be initiated or “triggered” in a number of ways, including a foot pedal switch, production line mounted microswitch or a variety of photocells. Universal offers the following standard triggering systems in kit form which includes all the required hardware and complete installation instructions.



The Foot Pedal Trigger is designed for manual initiation of the marking cycle. This triggering device is commonly used when the coder is bench mounted and products are manually placed under the marking head for imprinting. The HQC-100-FPT Kit includes a Foot Pedal Switch, an 8 Foot Cable and installation instructions.




The HQC-100-MST Micro-Switch is a contact trigger used to initiate the print cycle of the HQC. This unit is permanently mounted to the production line and has a 2.5” long trip lever with a low (2.5 Oz.) operating force. Body Dimensions: 2.1” x 1.55” x 0.84”.

The HQC-100-MST Kit includes a Microswitch, Dust Proof Enclosure, 6 Foot Cable, Mounting Screws and installation instructions.



The HQC-100-PCT-D is a compact NPN, intelligent reflective beam photocell which is used for non-contact triggering of the HQC marking cycle. This photocell features both automatic and manual calibration options, digital readout, and a sensing range of up to 11.81” (300mm). This sensor excels in applications where product shape, color variations and even clear packaging materials can cause other photocells to fail. Body Dimensions: 1.4” x 0.785” x 0.48”.

The HQC-100-PCT-D Kit includes the Photocell, Mounting Bracket, 6 Foot Cable and installation instructions. IP-67 Rated for harsh, wet environments.

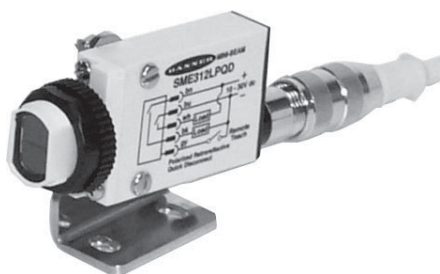

The HQC-100-PCT-LR is a compact, long range retro-reflective Photocell which is used for non-contact triggering of the HQC marking cycle. This unit has an effective range up to 10 feet and is rated for harsh environments and suitable for installation in wet areas. Body Dimensions: 2.6” x 1.21” x 0.48”.

The HQC-100-PCT-LR Kit includes the Photocell, mounting bracket, 6 foot cable and 3” diameter reflector. (Not recommended for sensing clear plastic or glass containers.)

PART NUMBER	DESCRIPTION
HQC-100-FPT	FOOT PEDAL TRIGGER KIT
HQC-100-MST	MICRO-SWITCH TRIGGER KIT
HQC-100-PCT-D	PHOTOCELL TRIGGER KIT
HQC-100-PCT-LR	PHOTOCELL TRIGGER KIT - LONG RANGE

## KORTHO HOT QUICK CODER INK ROLLS & TEXT PLATE PARTS LIST



INK ROLLS ARE SUPPLIED IN CONVENIENT SIX-PACK BOXES AND ARE AVAILABLE IN THE FOLLOWING COLORS:

**BLACK, BLUE, RED, WHITE, GREEN AND YELLOW.**

Ink rolls, which are dry to the touch at room temperature, are preheated prior to use in the self-contained heating system. The Hot Quick Coder utilizes hot ink technology to provide clean, sharp, nearly instant dry impressions at a high rate of speed. When hot, the ink in the roll becomes fluid and is then ready for operation. A spare roll can be stored in the unit's preheat chamber during production to keep it ready for immediate use.



FLAT TYPE HOLDER - 4 RIB

Additional HQC-100-FTH Flat Type Holders are available to enable setting up codes off line for extremely fast code changes during production. Having a spare eliminates the need to let the active Type Holder cool down for comfortable handling.

Print Area: 12mm x 24mm (Approx: 0.5" x 1.0")



CONCAVE TYPE HOLDER

The HQC-100-THCONCAVE Type Holders are designed for use in applying codes along the length of cylindrical parts such as round bottles and cans. The concave shape of this type holder conforms to the curvature of the cylinder and enables multiple lines to be printed. The ribbed rubber mat hold the type and provides a cushion to ensure a clear imprint



CONVEX TYPE HOLDER

The HQC-100-THCONVEX Type Holders are designed for use in applying codes to the bottoms of aerosol cans. The convex shape of the type holder conforms to the curvature of the can bottom. A ribbed rubber mat holds the type and provides a slight cushion to ensure a clear imprint.

PART NUMBER	DESCRIPTION
HQC-6-BK	S-11 BLACK HOT QUICK CODER INK ROLLS - 6/PK
HQC-6-BL	S-12 BLUE HOT QUICK CODER INK ROLLS - 6/PK
HQC-6-RD	S-14 RED HOT QUICK CODER INK ROLLS - 6/PK
HQC-6-WH	S-15 WHITE HOT QUICK CODER INK ROLLS - 6/PK
HQC-6-GR	S-17 GREEN HOT QUICK CODER INK ROLLS - 6/PK
HQC-6-YL	S-16 YELLOW HOT QUICK CODER INK ROLLS - 6/PK
HQC-100-FTH	FLAT TYPE HOLDER - 4 RIB
HQC-100-THCONCAVE	CONCAVE TYPE HOLDER
HQC-100-THCONVEX	CONVEX TYPE HOLDER

# KORTHO HIGH-TEMP RIBtype® SILICONE TYPE

The KORTHO Hot Quick Coder utilizes High-Temp RIBtype® Silicone type. This interchangeable ribbed type is available in a variety of sizes as shown below. The High-Temp rubber type is for the KORTHO Hot Quick Coder only. All boxed sets contain an assortment of characters, including punctuation, in varying quantities. The chart below shows the quantity of each character in our listed boxed sets.

A + ASSORTMENT																										
CHARACTER	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
QUANTITY IN SET	7	5	5	5	7	5	5	5	5	5	5	5	5	7	5	5	3	5	5	5	5	5	5	3	3	5
CHARACTERS	Å	Ä	Ö	Ü	Æ	Ø	1	2	3	4	5	6	7	8	9	0	.	,	-	/						
QUANTITY IN SET	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	1	3	1	1						




C + ASSORTMENT																										
FIGURES	1	2	3	4	5	6	7	8	9	0	.	,	-	/												
QUANTITY IN SET	9	9	9	9	9	9	9	9	9	9	2	3	2	2												

STYLE NO.	*TYPE FACE HEIGHT	LETTER TYPE SAMPLE	FIGURE TYPE SAMPLE
2/8	2 mm = 5/64"	<b>DEFGHIJKLMNOPQRSTUVWXYZAB</b>	<b>012345678901234567890123456789</b>
2/10	2.5 mm = 3/32"	<b>CDEFGHIJKLMNOPQRSTUVWXYZ</b>	<b>012345678901234567890123456</b>
2/12	3 mm = 1/8"	<b>XYZABCDEFGHIJKLMNO</b>	<b>56789012345678901234567</b>
2/14	3.5 mm = 9/64"	<b>PQRSTUVWXYZABCDEFGHI</b>	<b>78901234567890123456</b>
2/16	4 mm = 5/32"	<b>GHIJKLMNOPQRSTU</b>	<b>78901234567890123</b>
2/20	5 mm = 3/16"	<b>VWXYZABCDEFGHI</b>	<b>456789012345678</b>

\* TYPE FACE HEIGHTS ARE APPROXIMATE

KORTHO HIGH-TEMP RIBtype® SILICONE TYPE		
STYLE NO.	STOCK NO. A+ ASSORTMENT	STOCK NO. C+ ASSORTMENT
2/8	UR-28A+	UR-28C+
2/10	UR-210A+	UR-210C+
2/12	UR-212A+	UR-212C+
2/14	UR-214A+	UR-214C+
2/16	UR-216A+	UR-216C+
2/20	UR-220A+	UR-220C+

# KORTHO HQC-100 HOT QUICK CODER CONTROL BOX ASSEMBLY

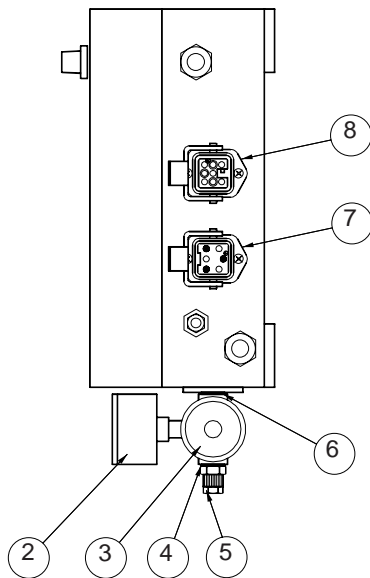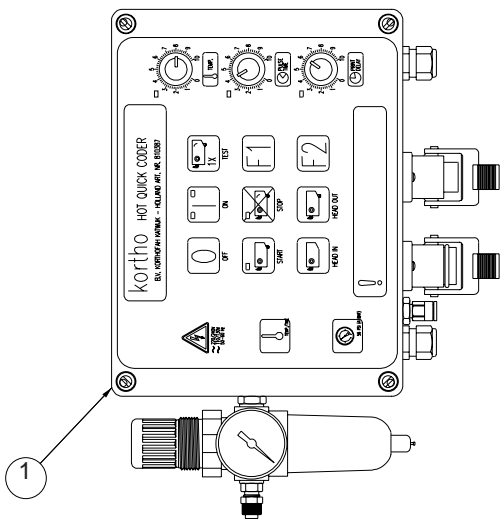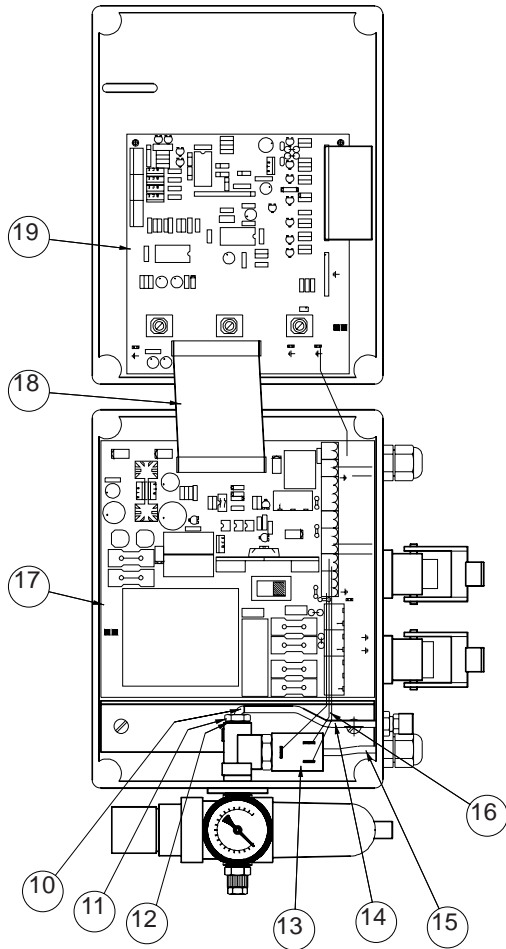


## **KORTHO HQC-100 HOT QUICK CODER CONTROL BOX PARTS LIST**

KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-810387	1	CONTROL BOX, HQC-AT - COMPLETE
2	HQC-156517	1	PRESSURE GAUGE, 0-10 BAR
3	HQC-152765	1	PRESSURE REGULATOR / FILTER ASSEMBLY
4	HQC-152822	1	GASKET
5	HQC-154079	1	STRAIGHT TUBE FITTING - 6MM TUBE
6	HQC-152822	1	GASKET
7	HQC-810542	1	SOCKET, MAIN VOLTAGE, HQC-AT
8	HQC-810539	1	SOCKET, CONTROL BOX/PRINT HEAD, HQC-AT
9	HQC-811869	1	POWER CORD, HQC 115 VAC
10	HQC-154152	1	ELBOW
11	HQC-152819	1	REDUCING COUPLING 1/8XM5
12	HQC-152822	1	GASKET
13	HQC-160564	1	SOLENOID VALVE 5-24 VDC
14	HQC-153268	1	AIR TUBE 6/4 BLACK - 83MM LONG (SUPPLIED IN 1 METER LENGTH)
15	HQC-153268	1	AIR TUBE 6/4 BLACK - 60MM LONG (SUPPLIED IN 1 METER LENGTH)
16	HQC-810708	1	ELECTRICAL CABLE, SOLENOID VALVE
17	HQC-810778	1	POWER SUPPLY ASSEMBLY, HQC
18	HQC-810794	1	CONTROL CABLE PCB, HQC-AT
19	HQC-810781	1	CONTROL BOARD, HQC

### Fuse Specifications for 115 VAC 60 Hz Systems


FUSE	PART NUMBER	DESCRIPTION
F1	HQC-155972	3.15 A (5X20) S FUSE
F2	HQC-155972	3.15 A (5 X 20) S FUSE
F3	HQC-159947	315 mA (5 X 20) S FUSE
F4	HQC-159947	315 mA (5 X 20) S FUSE
F5	HQC-161264	1.6 A (5 X 20) S FUSE
F6	HQC-161264	1.6 A (5 X 20) S FUSE

# KORTHO HQC-100 HOT QUICK CODER PRINT HEAD ASSEMBLY & PARTS LIST

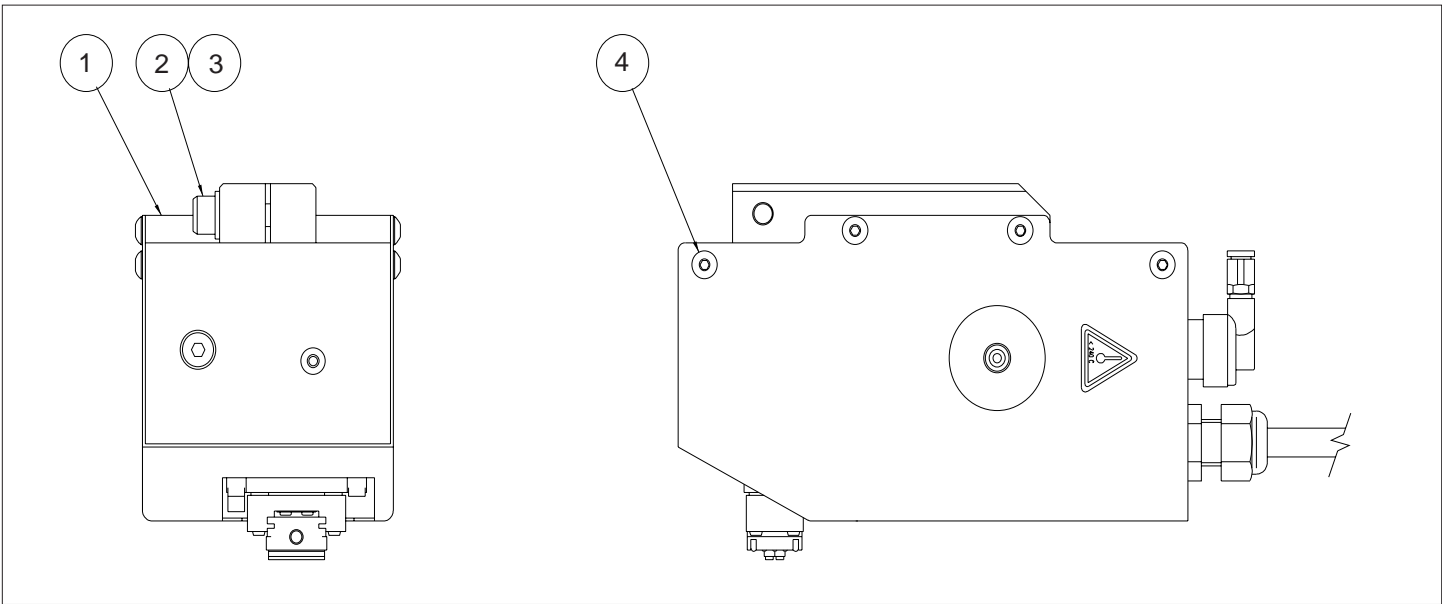





KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-810819	1	PRINTHEAD, HQC-AT
2	HQC-154782	1	CLAMPING SCREW, M8 x 35MM
3	HQC-154755	1	WASHER, 8MM
4	HQC-159399	8	SCREW, M5 X 10MM - BUTTON HEAD


# KORTHO HQC-100 HOT QUICK CODER FORK ASSEMBLY & PARTS LIST

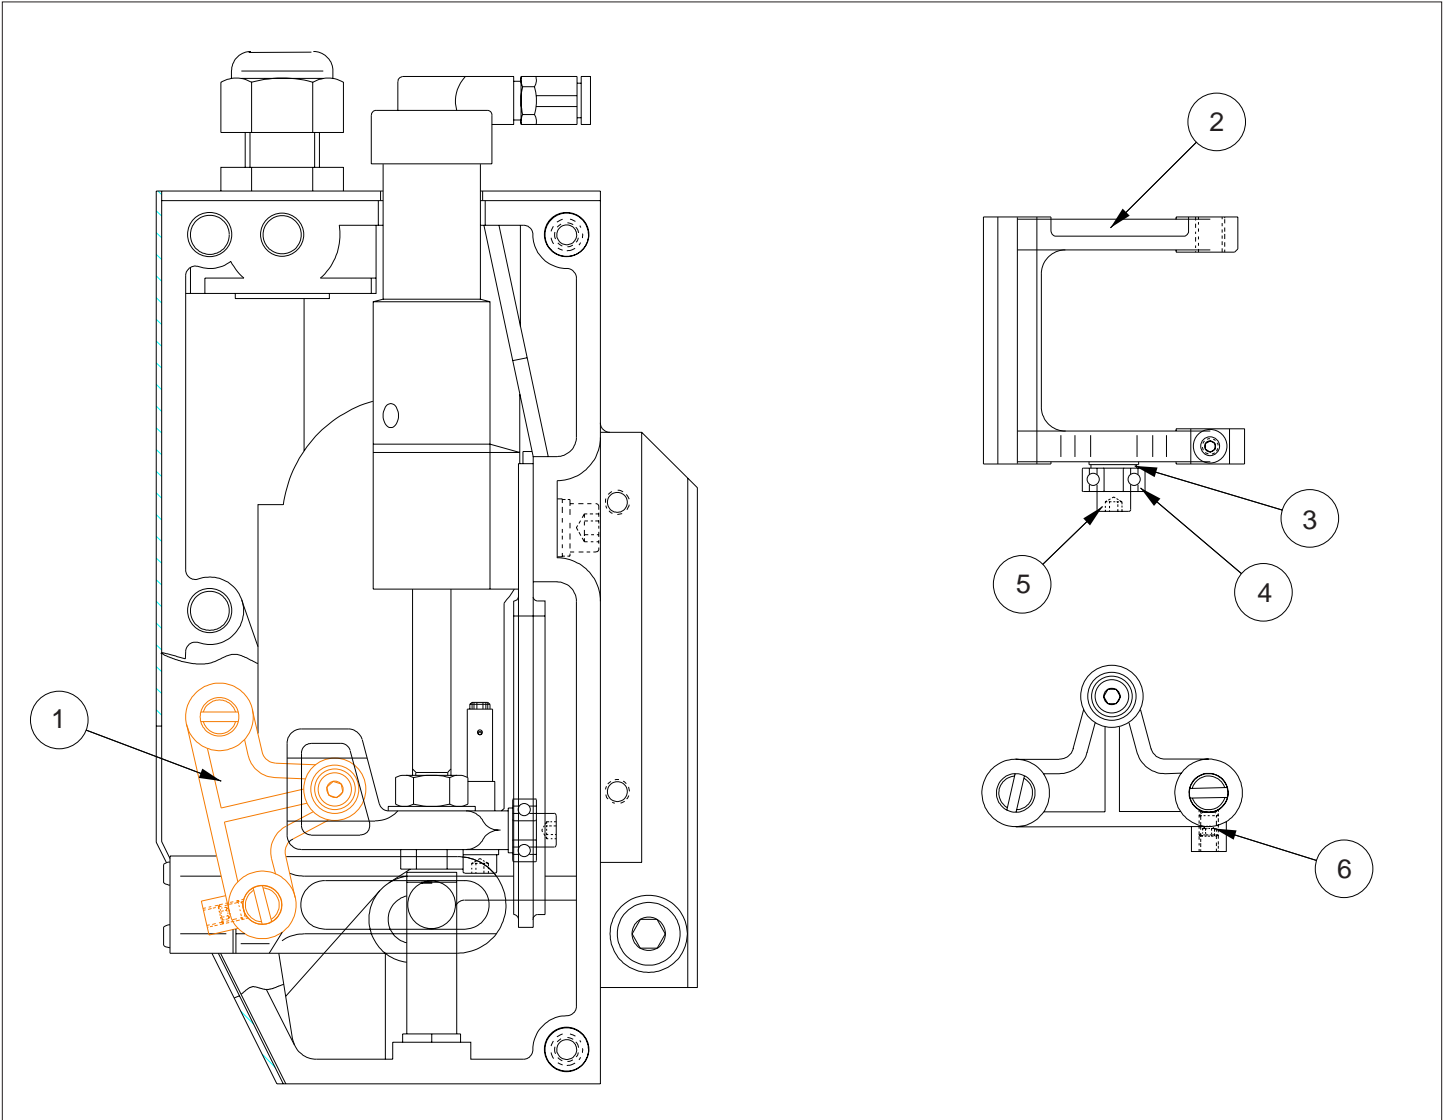

KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-803399	1	FORK ASSEMBLY, HQC
2	HQC-304764	1	FORK, PRINT HEAD
3	HQC-156454	1	WASHER, M4 X 3 SS
4	HQC-118087	1	BEARING
5	HQC-151699	1	SCREW, M4 X 12 SS
6	HQC-154318	1	SET SCREW, M4 X 10 SS


# KORTHO HQC-100 HOT QUICK CODER AIR CYLINDER ASSEMBLY & PARTS LIST

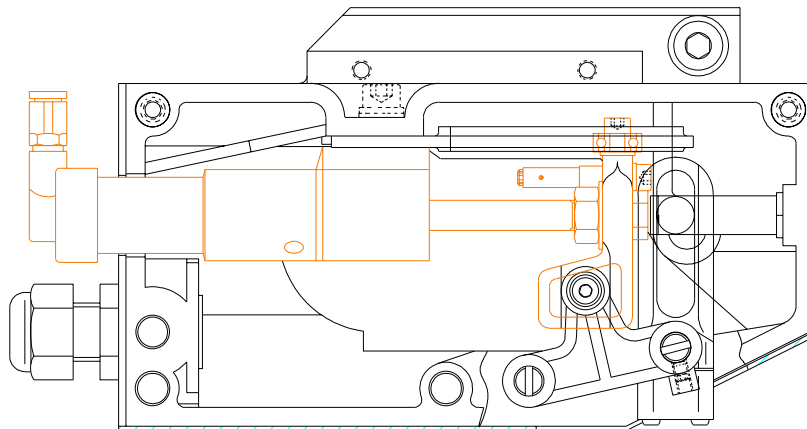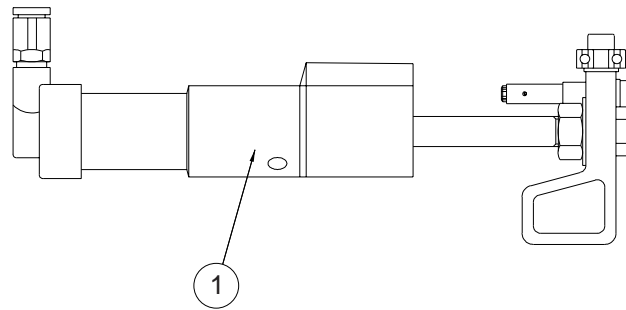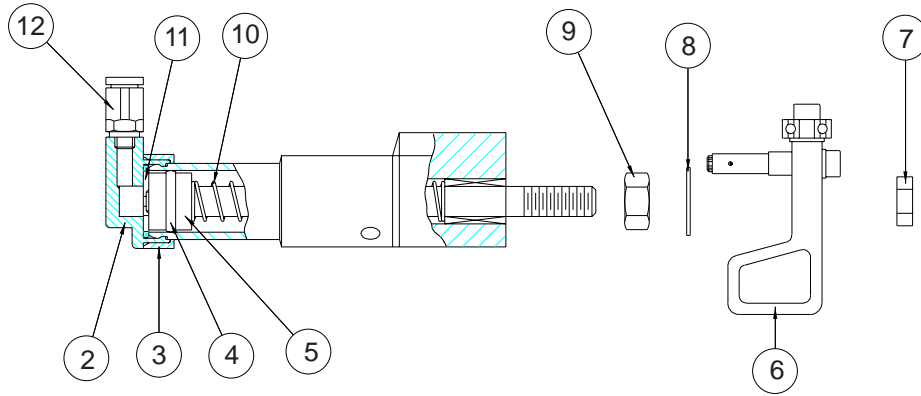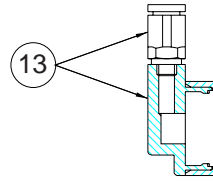

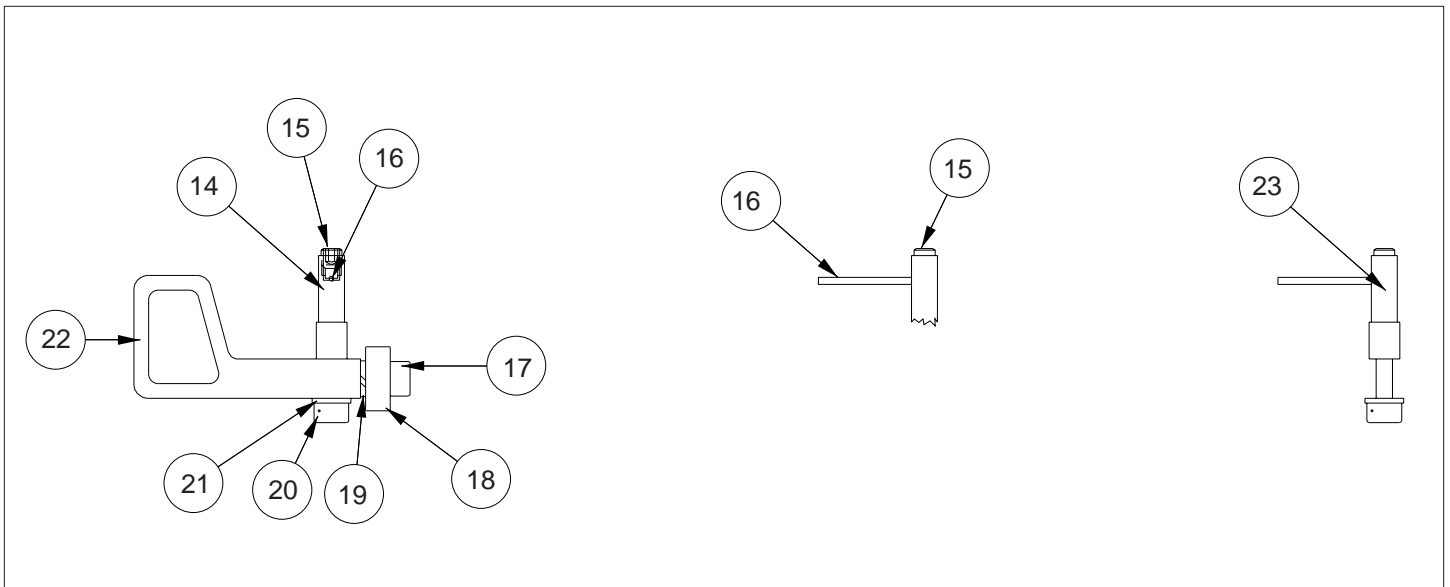


KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-809238	1	AIR CYLINDER ASSEMBLY, HQC-AT - COMPLETE
2	HQC-319365	1	BOTTOM, CYLINDER - HQC
3	HQC-156377	1	RETAINING RING, CYLINDER BOTTOM - HQC
4	HQC-151814	1	PISTON GASKETRING 16X9X2, 1MM
5	HQC-802518	1	PISTON, HQC
6	HQC-809419	1	DRIVING BLOCK, HQC
7	HQC-304859	1	BUSHING, DRIVING BLOCK
8	HQC-163071	1	WASHER
9	HQC-151451	1	HEX NUT, M8 X 1 SS
10	HQC-158127	1	RETURN SPRING, AIR CYLINDER
11	HQC-156389	1	BUFFER RING, HQC
12	HQC-160659	1	STRAIGHT TUBE COUPLING, M5 X 6
13	HQC-809422	1	CYLINDER BOTTOM ASSY. - HQC
14	HQC-315808	1	SPRING HOLDER, HQC
15	HQC-159654	1	SET SCREW, SPRING HOLDER - M4 X 6
16	HQC-317587	1	SPRING, INK ROLL INDEX
17	HQC-151702	1	SCREW, M4 X 16 SS
18	HQC-118087	1	BEARING
19	HQC-151798	1	LOCK WASHER, M4 X 1 SS
20	HQC-151699	1	SCREW, M4 X 12 SS
21	HQC-151798	1	LOCK WASHER, M4 X 1 SS
22	HQC-315919	1	DRIVING BLOCK, HQC
23	HQC-810851	1	DRIVING BLOCK/SPRING HOLDER ASSEMBLY - COMPLETE

# KORTHO HQC-100 HOT QUICK CODER TEXT PLATE HOLDER ASSEMBLY & PARTS LIST

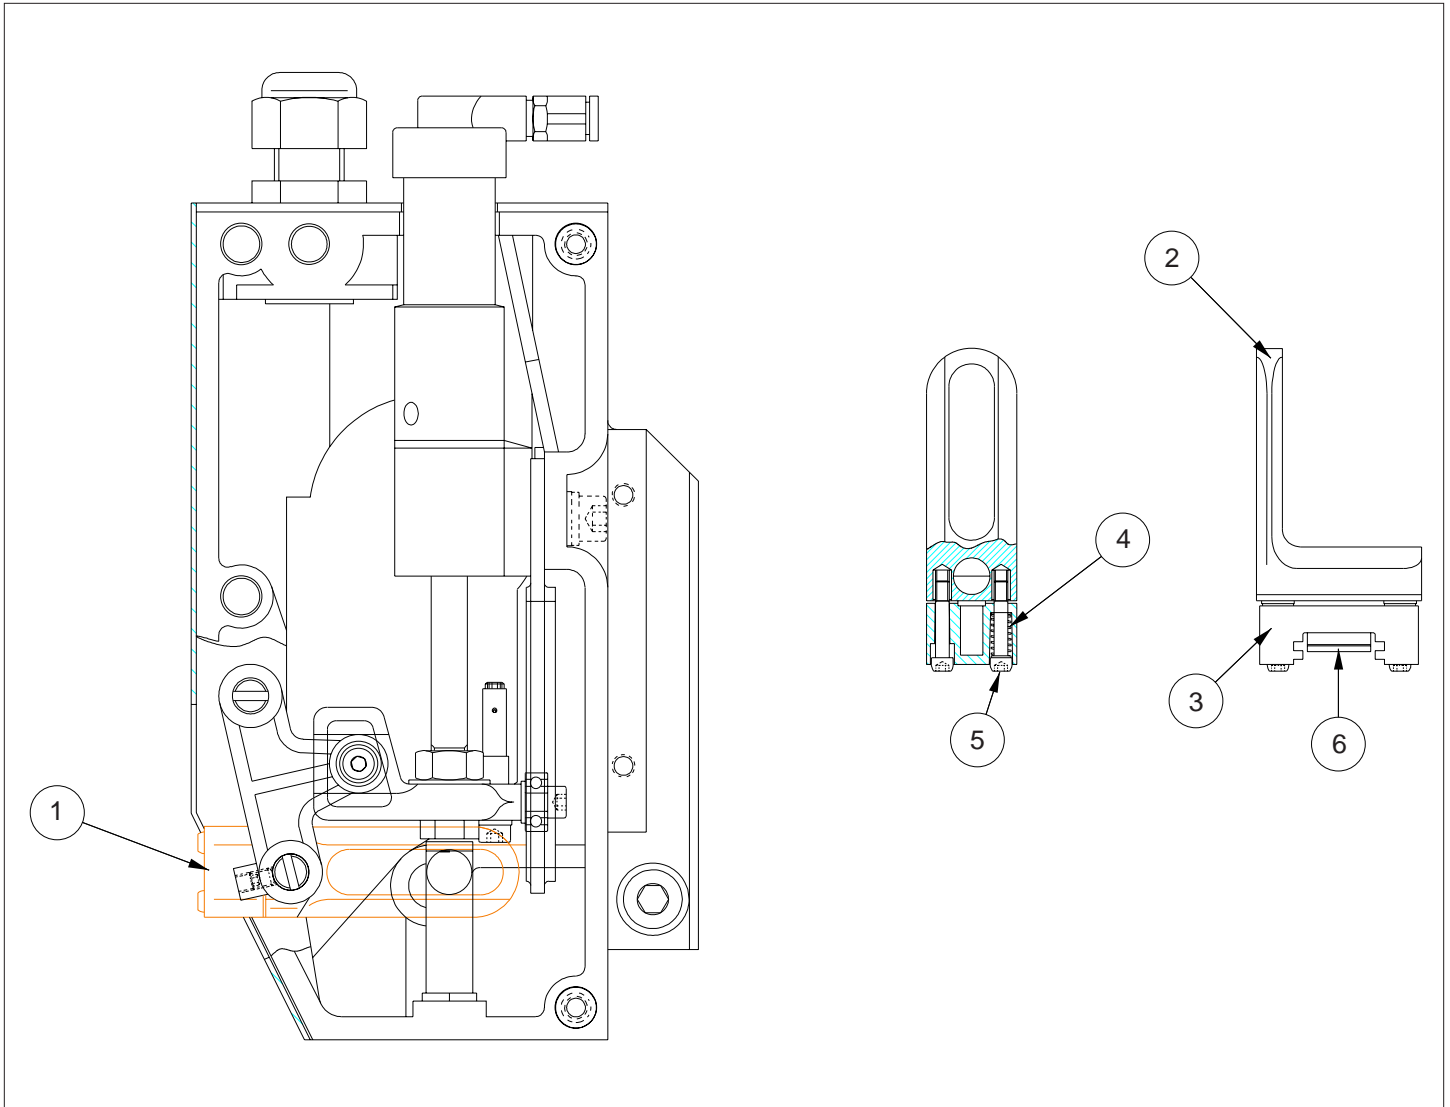


KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-809855	1	TEXT PLATE HOLDER ASSEMBLY, HQC - COMPLETE
2	HQC-802801	1	GUIDE BRACKET
3	HQC-809842	1	TEXT PLATE HOLDER, HQC
4	HQC-126572	2	COMPRESSION SPRING
5	HQC-304818	4	SCREW, PRINTING HEAD
6	HQC-304999	1	SPRING CLIP, PRINTING HEAD

# KORTHO HQC-100 HOT QUICK CODER CAM HOLDER & PARTS LIST

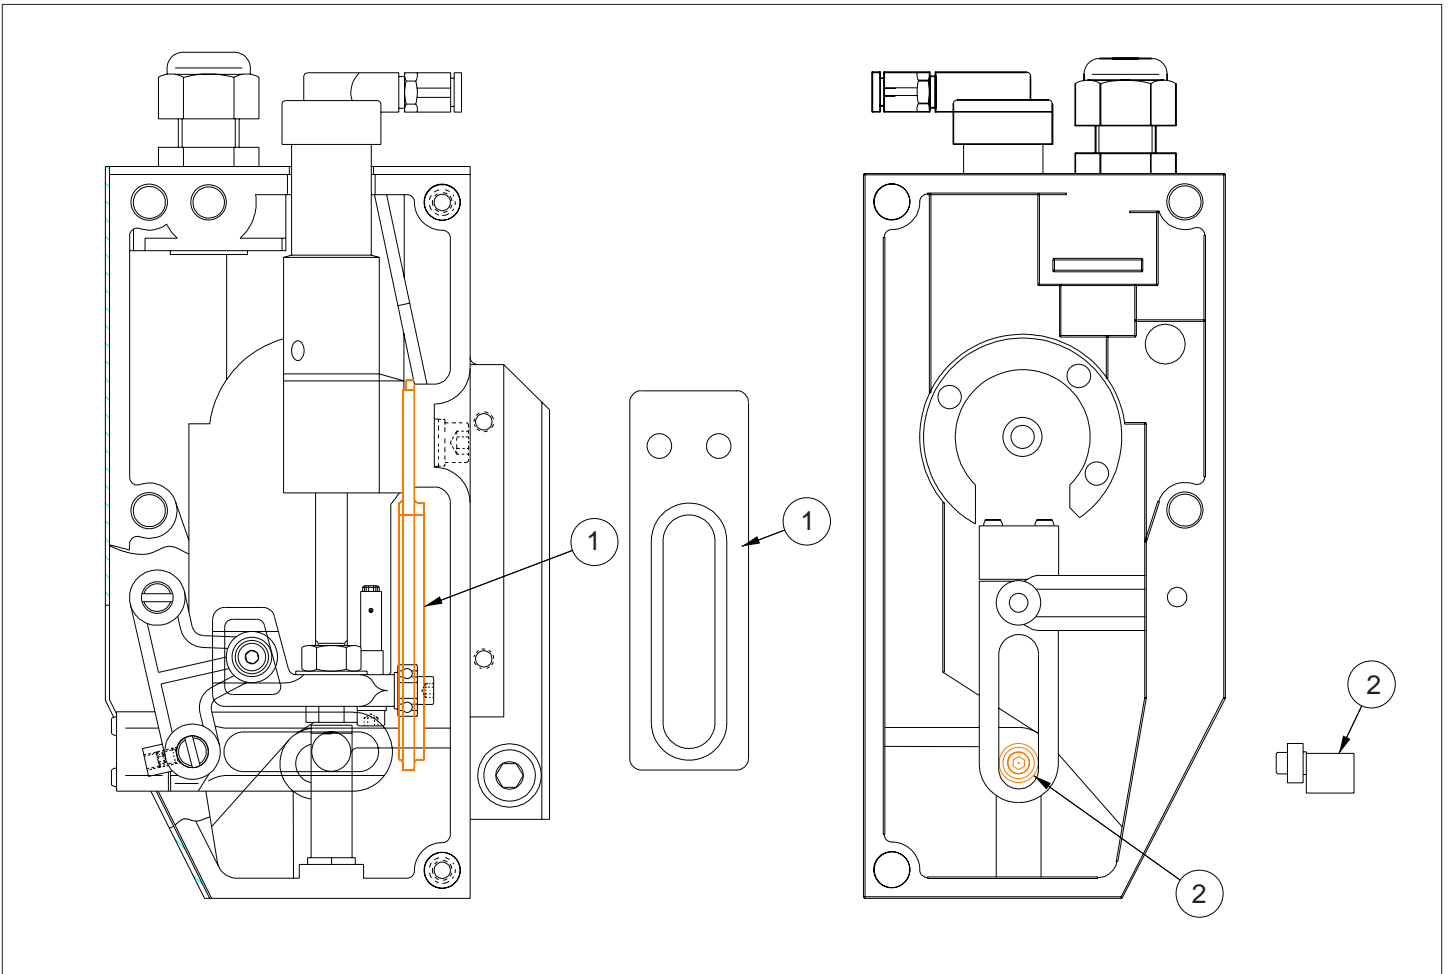


KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-316454	1	CAM HOLDER, HQC
2	HQC-802941	1	ECCENTRIC BRASS PLUG WITH BALLBEARING

# KORTHO HQC-100 HOT QUICK CODER HEATING ELEMENT ASSEMBLY & PARTS LIST

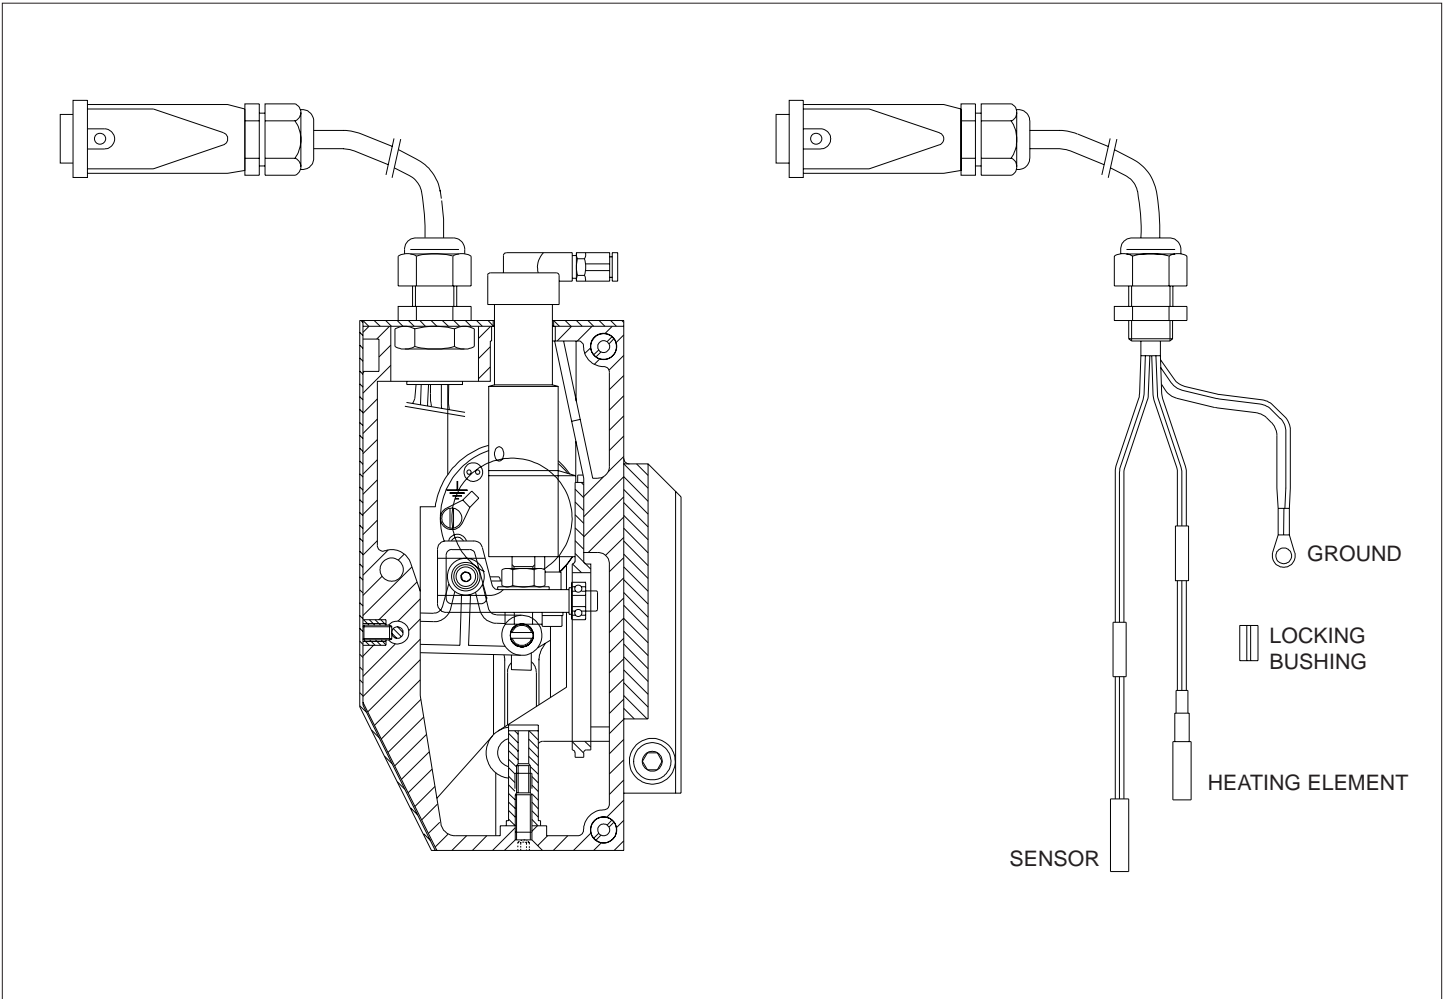

KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
1	HQC-814937	1	HEATING ELEMENT ASSEMBLY-115 VAC ONLY
	HQC-810807		HEATING ELEMENT ASSEMBLY-230 VAC ONLY

## KORTHO HQC-100 HOT QUICK CODER MOUNTING BRACKET ASSEMBLY & PARTS LIST

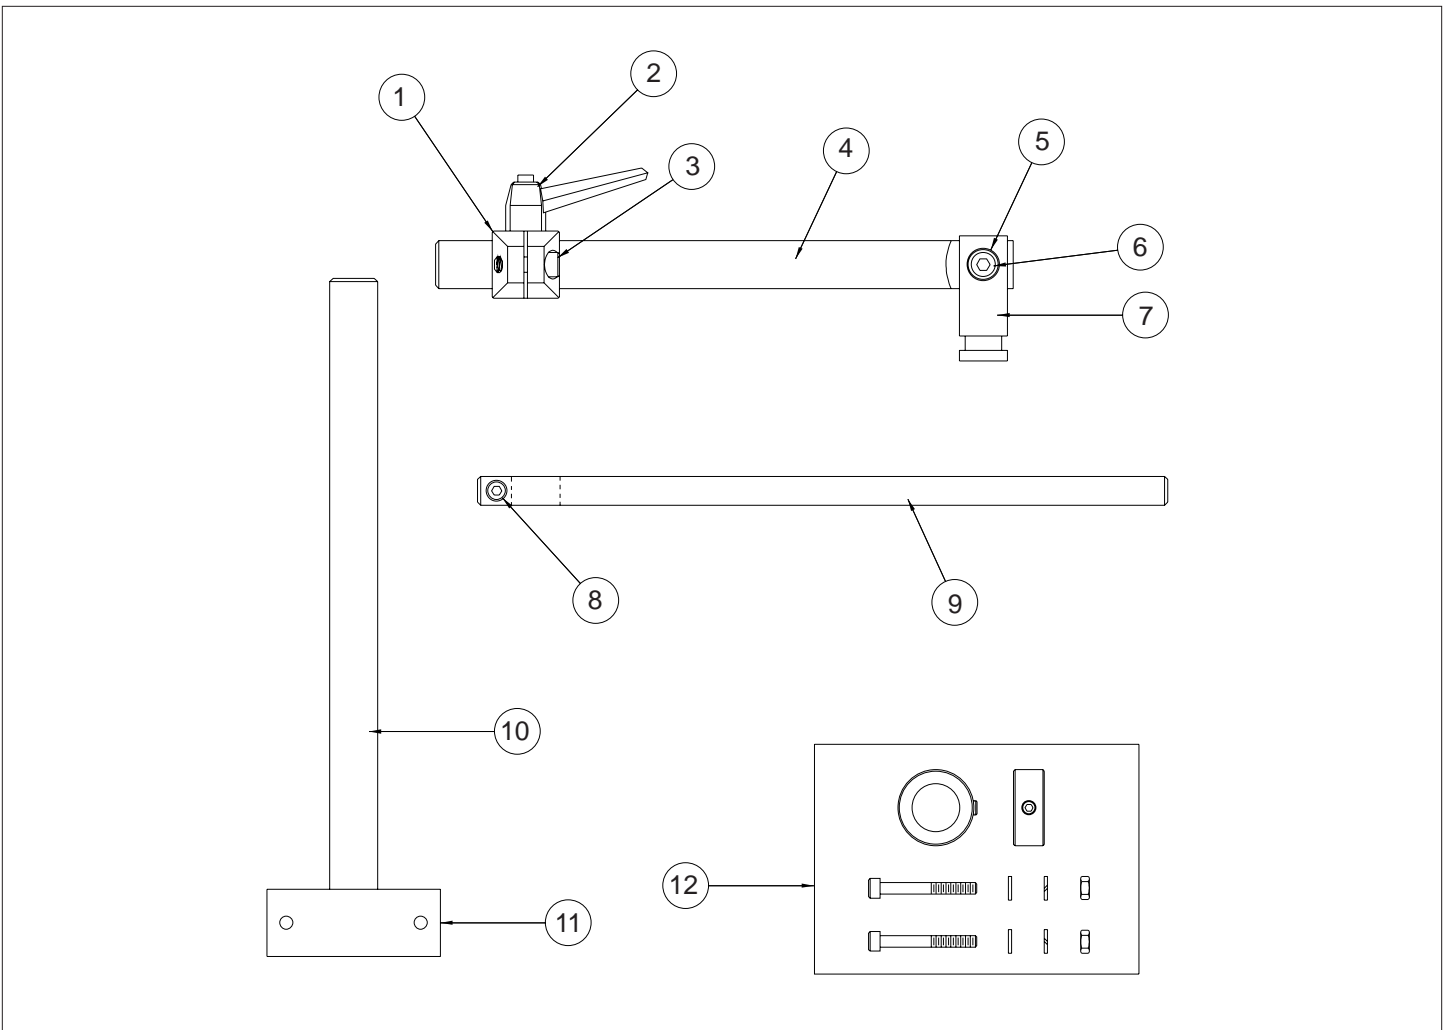

KEY NO.	PART NUMBER	QTY. REQD.	DESCRIPTION
ALL	HQC-809477	1	MOUNTING BRACKET ASSEMBLY, HQC - COMPLETE
1	HQC-316034	1	CROSS CLAMP BLOCK - HQC
2	HQC-158897	1	HANDLE, M8 X 25 - HQC
3	HQC-153478	1	CLAMPING SCREW, M8 X 20
4	HQC-315992	1	MOUNTING ARM - HQC
5	HQC-153452	1	LOCK WASHER, M8 X 1
6	HQC-155174	1	SOCKET HEAD CAP SCREW, M8 X 25
7	HQC-316664	1	MOUNTING STUD - HQC
8	HQC-154429	1	SOCKET HEAD CAP SCREW, M6 X 25
9	HQC-316062	1	PLATEN - HQC
10	HQC-315989	1	MOUNTING COLUMN - HQC
11	HQC-316018	1	MOUNTING BASE - HQC
12	HQC-809464	1	SHAFT COLLAR & HARDWARE KIT